


DALI Professional Controller-4

Software Manual

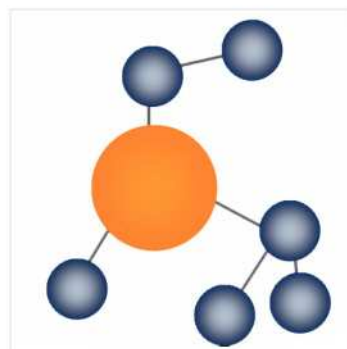


1.5.0



Introduction

The OSRAM DALI PROFESSIONAL System is a lighting control based on standardized DALI Bus according to IEC 62386 -> see : <http://www.dali-ag.org/>
With this a flexible addressable digital lighting control can be built-up. The central component is the DALI PROFESSIONAL CONTROLLER with 4 DALI lines. These DALI lines can be equipped with DALI suitable ECG for lamp operation and DALI operation units / sensors.

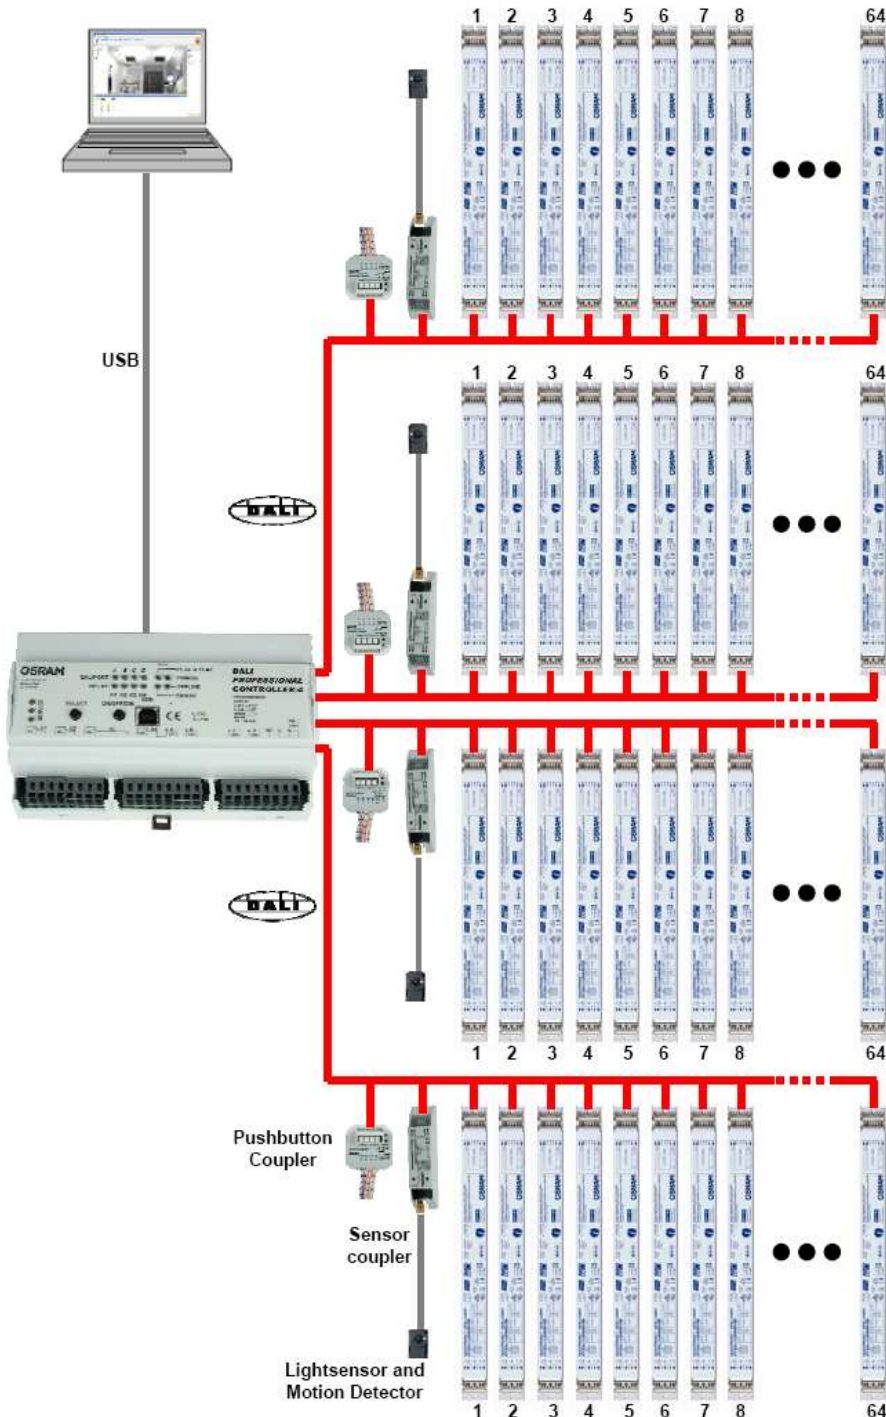

Detailed product descriptions are available for :

- DALI Controller
- DALI Pushbutton Coupler
- DALI Sensorcoupler + Sensors LS/PD
- DALI HIGHBAY Adapter
+ Sensor HIGHBAY or VISION
- DALI LS/PD LI
- DALI e:bus Gateway
- e:bus Glasstouch 6T, 12T, 6TR
- e:bus Touchpanel

Use with PC, first steps

Software Installation

Load software from www.osram.com/software

Extract the .zip file

Install DALI Professional system software by starting

'Setup OSRAM DALI Professional vx.x.x.x.exe'

Default directory for the software : C:\Program Files\OSRAM\DALI Professional\

Establish USB connection Controller - PC

Start program with desktop icon  or by
Start / Programs / OSRAM / DALI Professional /  OSRAM DALI Professional

Start firmware update to controller if requested by the software
(latest firmware is already automatically stored on PC with software installation)

Supported Windows Versions :

successfully tested with Windows XP, Windows Vista, Win7, Win8

Operation, Commissioning

Connect controller to PC via USB

Read out devices / assign names

Define groups and functions

Define scenes

Store settings

Upload configuration / settings to controller

Perform tests

Disconnect USB

Caption for Screenshots


Menu line

Message line

click for action

look here


pull for drawing connection
(use numerical order)

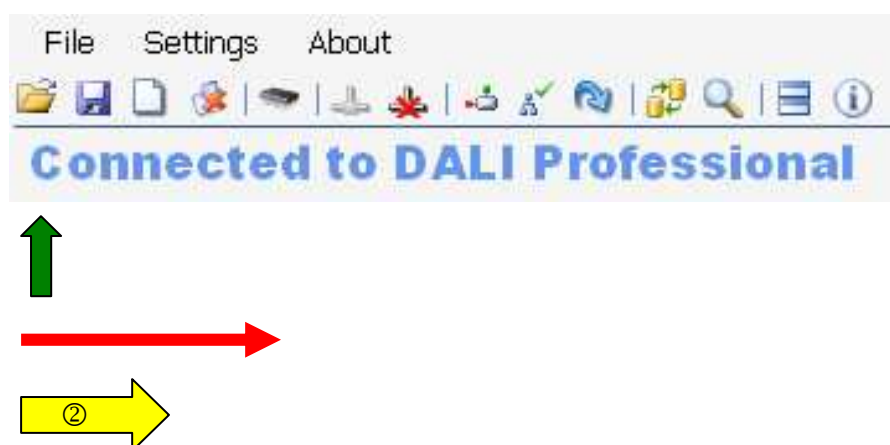


Example application Components

Office
Controller, Luminaires (ECG), Pushbutton- / Sensorcoupler

Startscreen, connection with Controller, start search devices

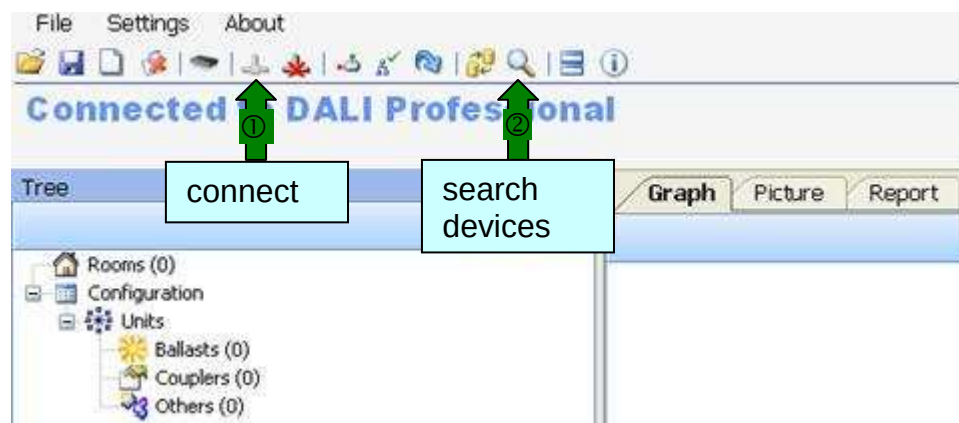

Search devices, search process

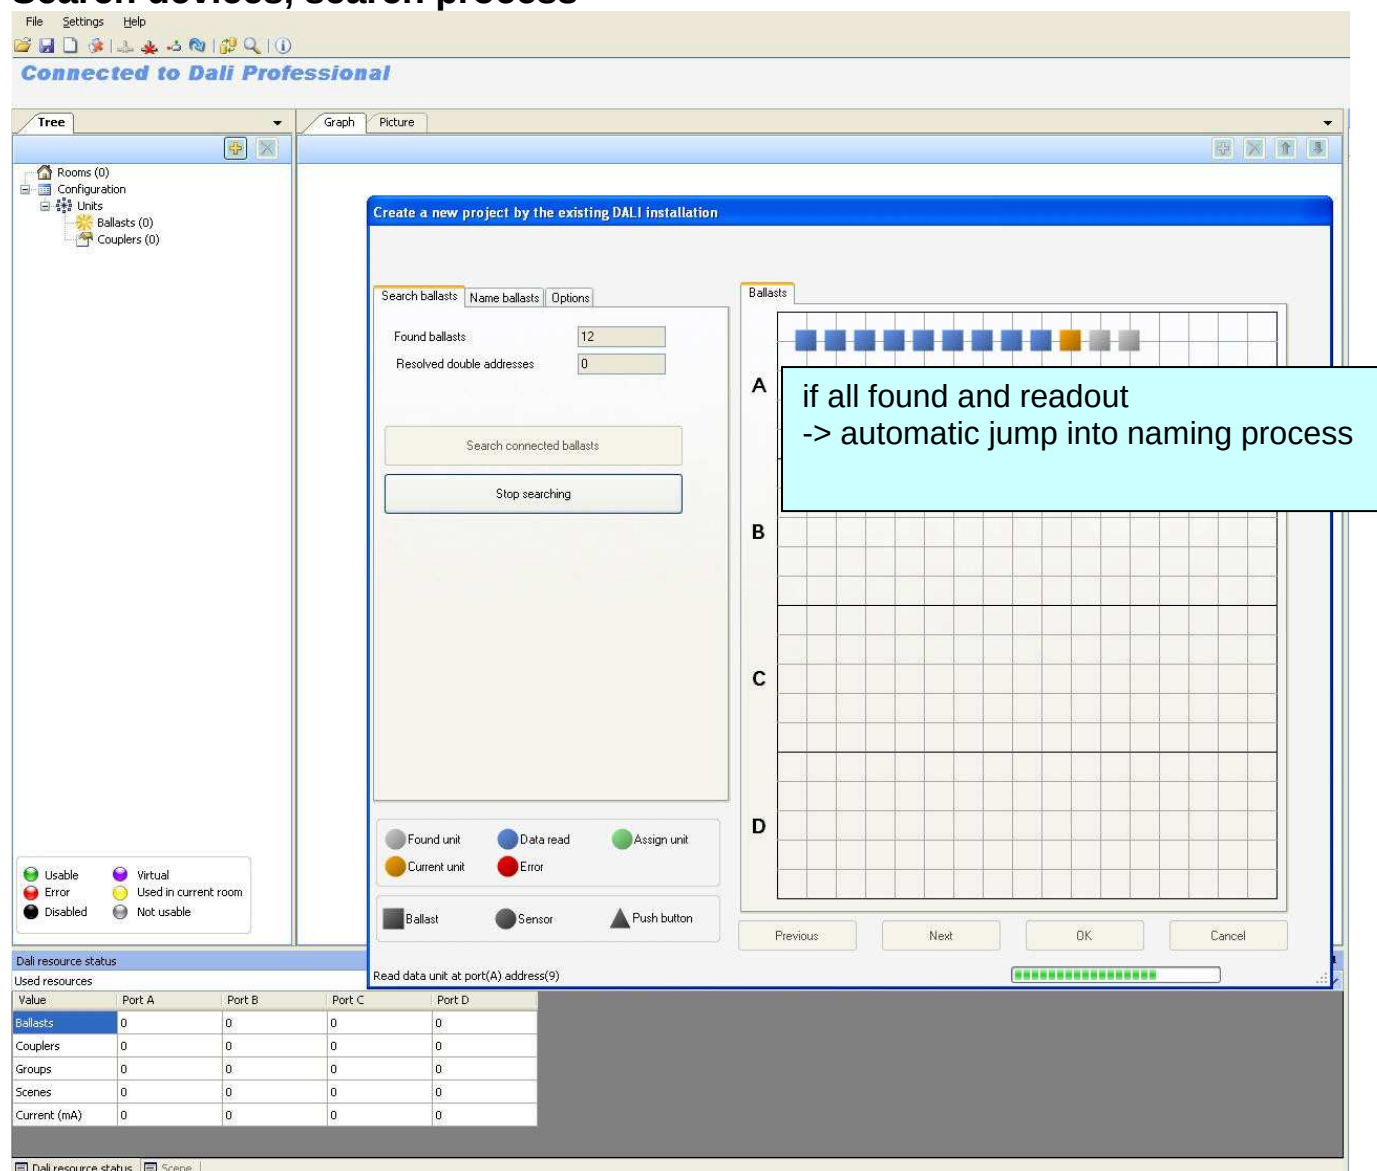


Find devices and assign names to them / Blink Chain

① start search process

In the blink chain different parameters can be changed in 'Options':
e.g. chain velocity, blinkfrequency, lightlevel before, after

② assign ECG name (if skipped automatic name definition = devicetype port# (device#))

Create a new project by the existing DALI installation

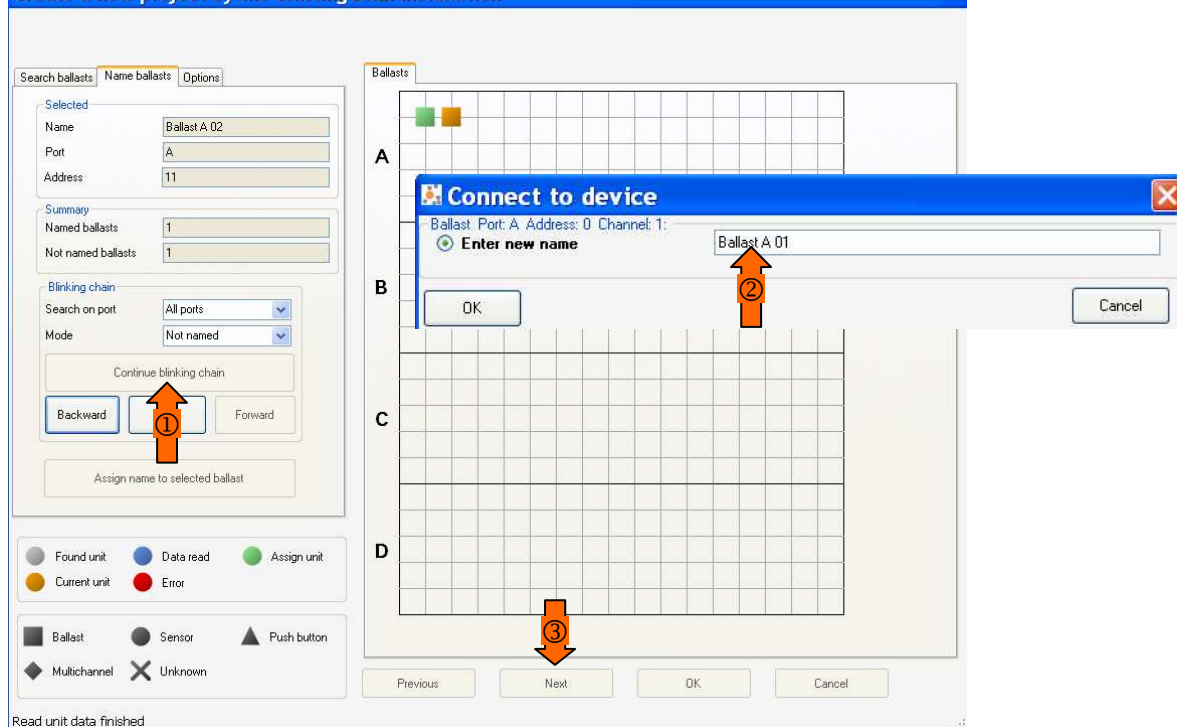


Read unit data finished

③ If all ECGs identified -> continue with Next

Then proceed analog for coupler devices :

④ Select in 'Search coupler type' between Pushbutton or PIR- and Lightsensor.
Due to the fix mechanical connection between PIR- and Lightsensor,
these devices get assigned names in same workstep.

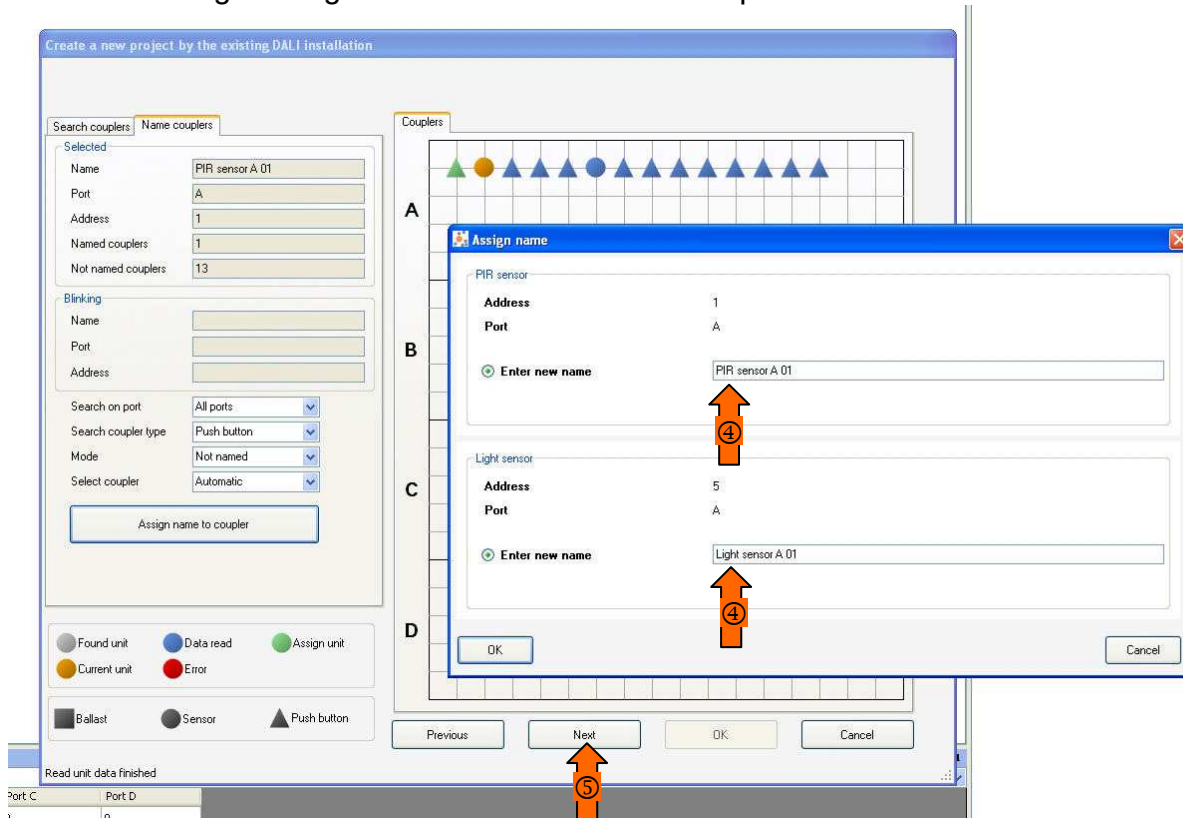

⑤ continue with Next and complete

Identification Result - Identification of Devices

Create a new project by the existing DALI installation

Finish unit assignment

Ballasts

Not changed	0
Replaced	0
Added	4
Removed	0
Data changed	0
Skipped	0
Error	0

Couplers

Not changed	0
Replaced	0
Added	6
Removed	0
Data changed	0
Skipped	0
Error	0


Summary

Address	Port	Channel	Name	Type	Difference	Error
0	A		Ballast A 01	Ballast	added	
1	A		Ballast A 02	Ballast	added	
2	A		Ballast A 03	Ballast	added	
3	A		Ballast A 04	Ballast	added	
0	C	1	PB C 0-0-5-146 D white	Push button	added	
1	C	1	PB C 0-0-5-146 C orange	Push button	added	
2	C	1	PB C 0-0-5-146 A violet	Push button	added	
3	C	1	PB C 0-0-5-146 B pink	Push button	added	
4	C	1	PIR sensor C 01	PIR sensor	added	
5	C	1	Light sensor C 01	Light sensor	added	

Unchanged
 Detected Differences
 Error

Previous Next OK Cancel

after OK all identified devices will show up in device tree

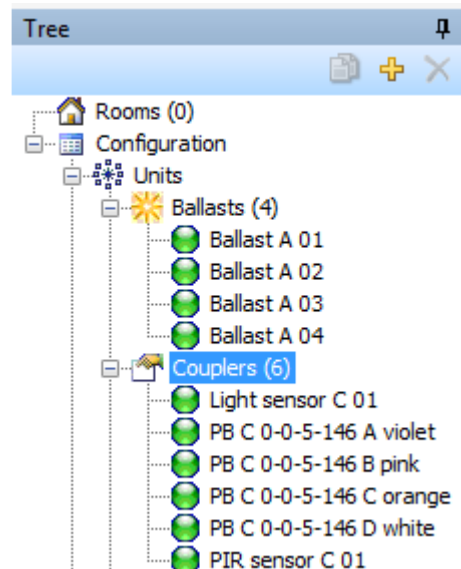


Merge of configuration with existing system / new devices

Combine project with existing DALI installation




Runs similar as search process in first setup, but additional choice of already existing names.

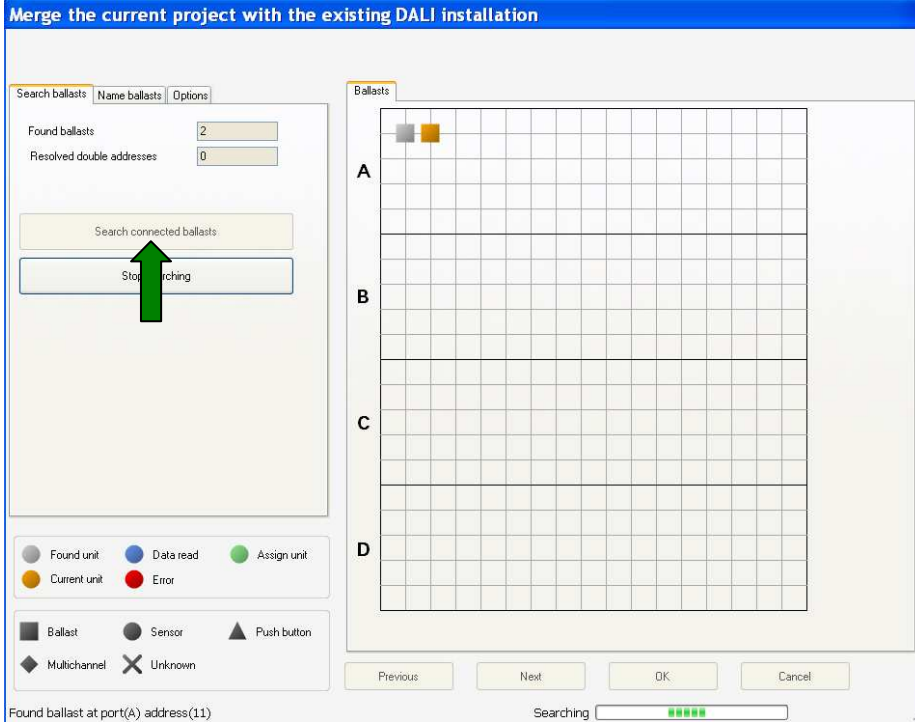

Goto Blinkchain und find the related ECGs / coupler

New devices are blue, already existing and named devices are green.

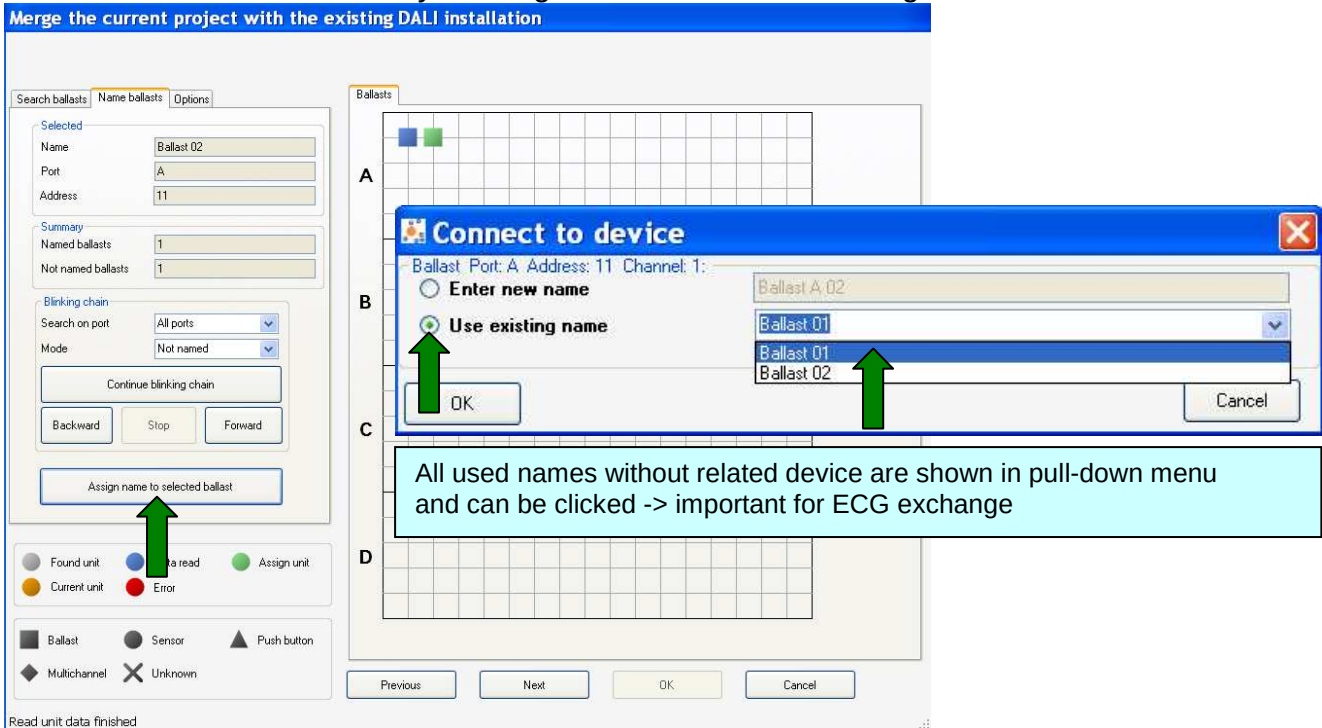

Result -> replaced units shown in difference row

Merge the current project with the existing DALI installation

Finish unit assignment

Ballasts

Not changed 0

Replaced 2

Added 0

Removed 0

Data changed 0

Skipped 0

Error 0

Couplers

Not changed 0

Replaced 4

Added 0

Removed 0

Data changed 0

Skipped 0

Error 0

Summary

Address	Port	Channel	Name	Type	Difference	Error
0	A		Ballast 01	Ballast	Replaced	
11	A		Ballast 02	Ballast	Replaced	
0	A	1	PB 01 B pink	Push button	Replaced	
1	A	1	PB 01 C orange	Push button	Replaced	
2	A	1	PB 01 A violet	Push button	Replaced	
3	A	1	PB 01 D white	Push button	Replaced	

Unchanged

Detected Differences

Error


Previous

Next

OK

Cancel

View of merged project

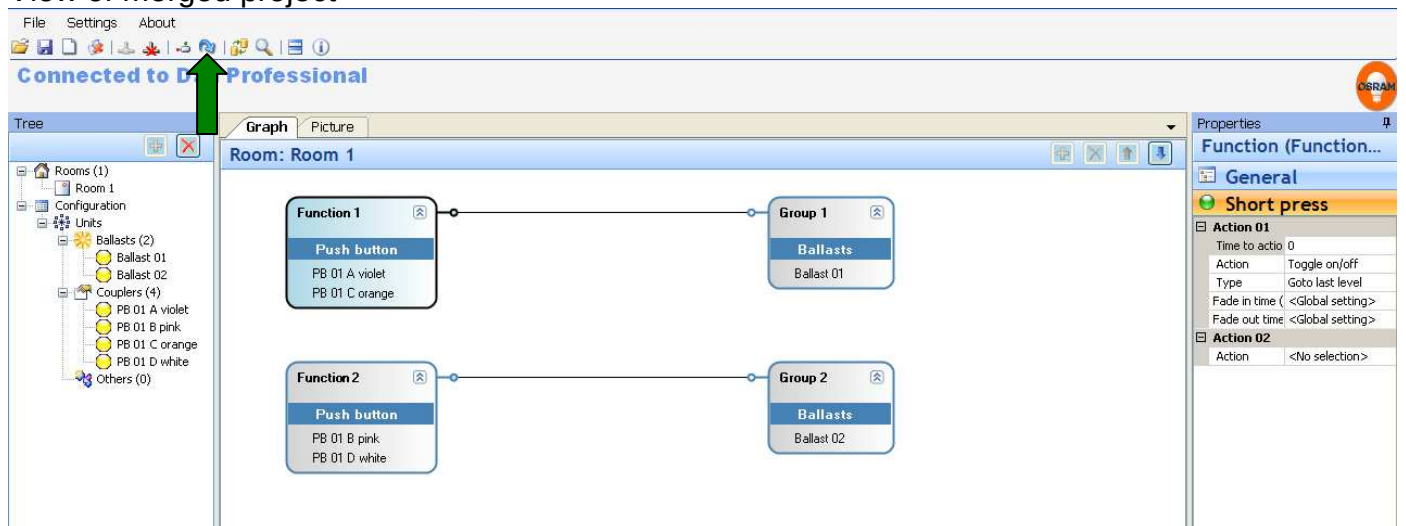

Final upload merged project to controller

Upload project

Send (80,6%)

Cancel

Graph View - Define Functions and Parameters

The screenshot shows the DALI Graph View software interface. The main window is titled 'Room: Room 1' and displays a graph with three functions (Function 1, Function 2, Function 3) and three groups (Group 1, Group 2, Group 3). Function 1 is connected to Group 1, Function 2 is connected to Group 2, and Function 3 is connected to Group 3. The Properties panel on the right shows the configuration for the selected function, including General and Movement settings. The Dali resource status table at the bottom shows the status of various resources.

Value	Port A	Port B	Port C	Port D
Ballasts	8	0	0	0
Couplers	6	0	0	0
Groups	3	0	0	0
Scenes	2	0	0	0
Current (mA)	26	0	0	0

① pull Ballast with into Graph window
into empty area -> new group will be opened
into group -> added to group

② pull Sensor into Graph window
into empty area -> new function will be opened
into function -> added to function

①②a observe ressource status

③ click into function field and draw a line to according group field -> connected

④ define parameters of function (optional, only necessary if presets shall be changed)
define actions, default for finish sequence is with Action ..= <none>

Finish Setup

⑤ Store configuration 


⑥ Upload configuration to controller 

Close software program and disconnect USB

-> installation ready for use

Light Regulation - include lightsensor and set value


- ① Pull lightsensor into a function, add activation device (pushbutton and/or PIR sensor).
- ② Configure a shortpress / movement to action = regulation.

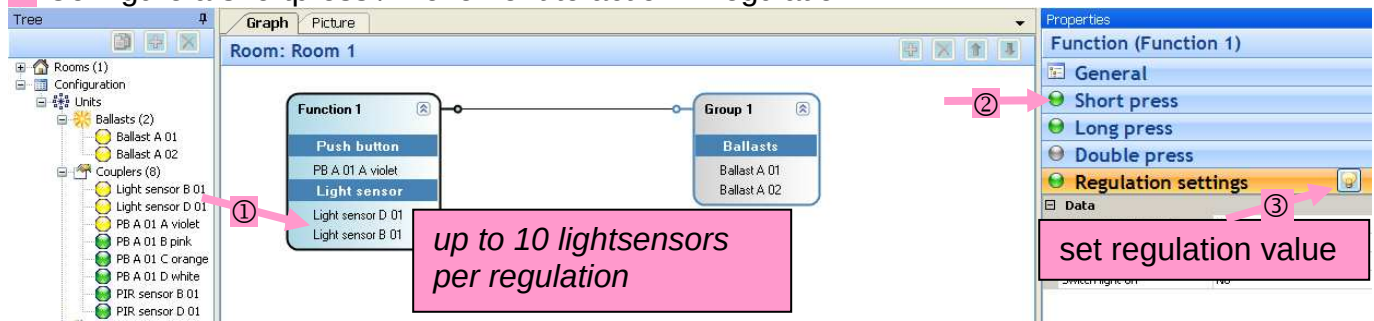


- ③ Press button for 'regulation setting'
- ④ Adjustment window shows up



Procedure without room calibration (standard for all applications)

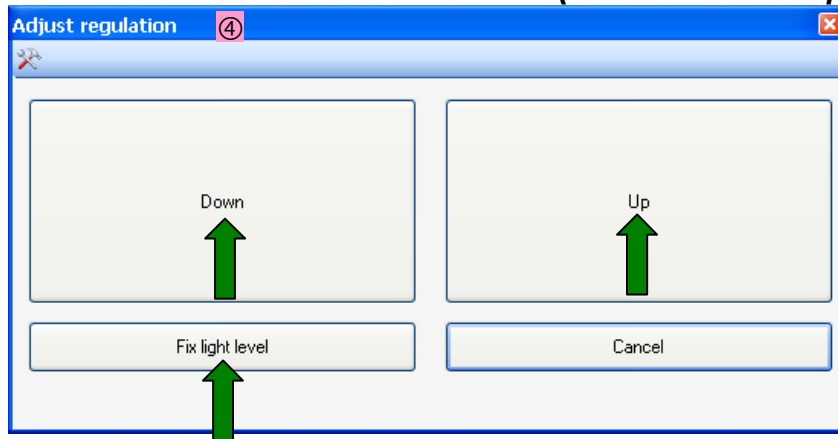


set requested illumination level by pressing Down / Up
store value - according group flashes -> value saved

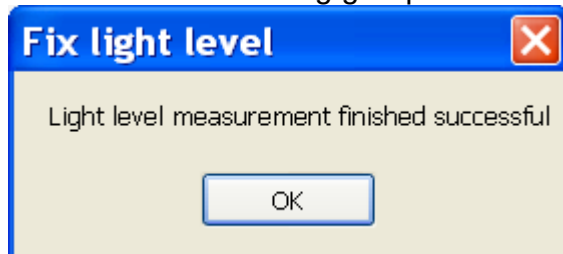

-> Upload to controller , then start regulation via related pushbutton or PIR

We recommend to set the lightregulation levels at a time of the day when the lightinfluence from outside is low to avoid sensor overflow. If not there could happen a error message :

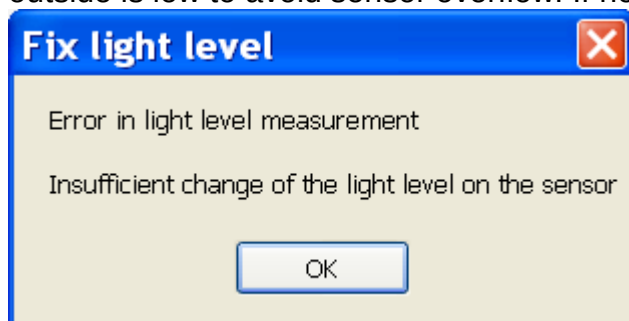

(OPTIONAL) Extended functions for light regulation

Procedure with room calibration

Recommended in case of critical light environments where the standard method provides insufficient accuracy e.g. caused by direct sunlight influence. Checks the geometric parameters of the room and positioning of the lightsensor, but needs a light measurement device (Luxmeter).

The screenshot shows the 'Adjust regulation' window. A pink box labeled 'show expert mode' with an arrow points to the wrench icon in the top-left corner. Another pink box labeled 'start room calibration' with an arrow points to the calibration icon (a square with a diagonal line and a dot) in the right column of the table.

Name	Value
Reference ballast	17,4%
Average sensor value	300 (29,33 %)
Regulation factor	2,8

Below the table are two large buttons: 'Down' and 'Up'. At the bottom are two smaller buttons: 'Fix light level' and 'Cancel'.

2x input measurement value for light ON and light OFF

The screenshot shows the 'Regulation factor calibration' window. It has a 'Measurement' tab. The text inside says: 'Please wait until light level ist stable. Then enter the value from the illuminance meter and commit'. Below this is a text input field with the placeholder 'Value from the illuminance meter'. At the bottom are two buttons: 'Continue' and 'Cancel'.


After this inputs set lightlevel as decribed in standard procedure without calibration.

Then Upload to controller  (to save all created regulation values there)

Creating and Calling Scenes

DALI scenes can be created on screen and called via pushbutton.


- ① Click to function
- ② Add new scene with 
- ③ Define light levels for each ballast
- ④ Define scene to be called with this button

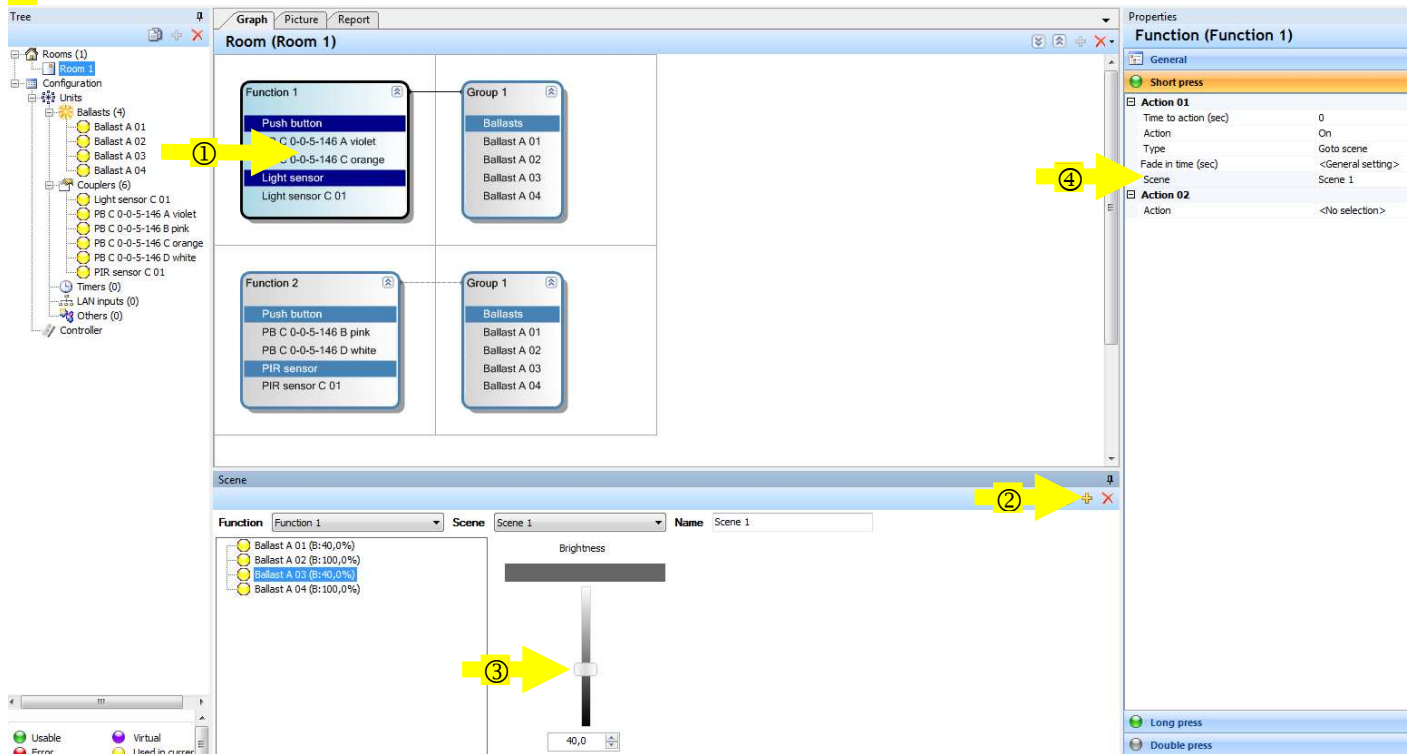

Goto Next Scene - Call Several Scenes with one Single Pushbutton

Feature to go through several scenes with only one pushbutton.

- Each shortpress on pushbutton calls next scene in list
- If full scene loop has been called through - loop starts again with first scene in list
- Max. 16 scenes can be used
- Each scene can be used only one time in the order
- Works only in Action type = On
- If power failure occurs first scene in order will be recalled

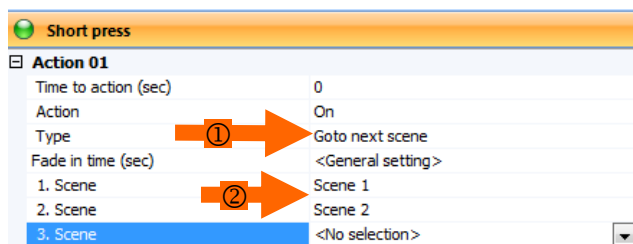



Configuration :

Scene configuration as usual with scene creation in Scene window
Then start design of scene order :

- ① select 'goto next scene'
- ② add scene# from pull-down menu to select order of scenes

(OPTIONAL) Picture View - Arrange Devices and Create Scenes

①a,b Select room, import room picture as .jpg or .bmp
Picture can be removed again by selecting and delete.

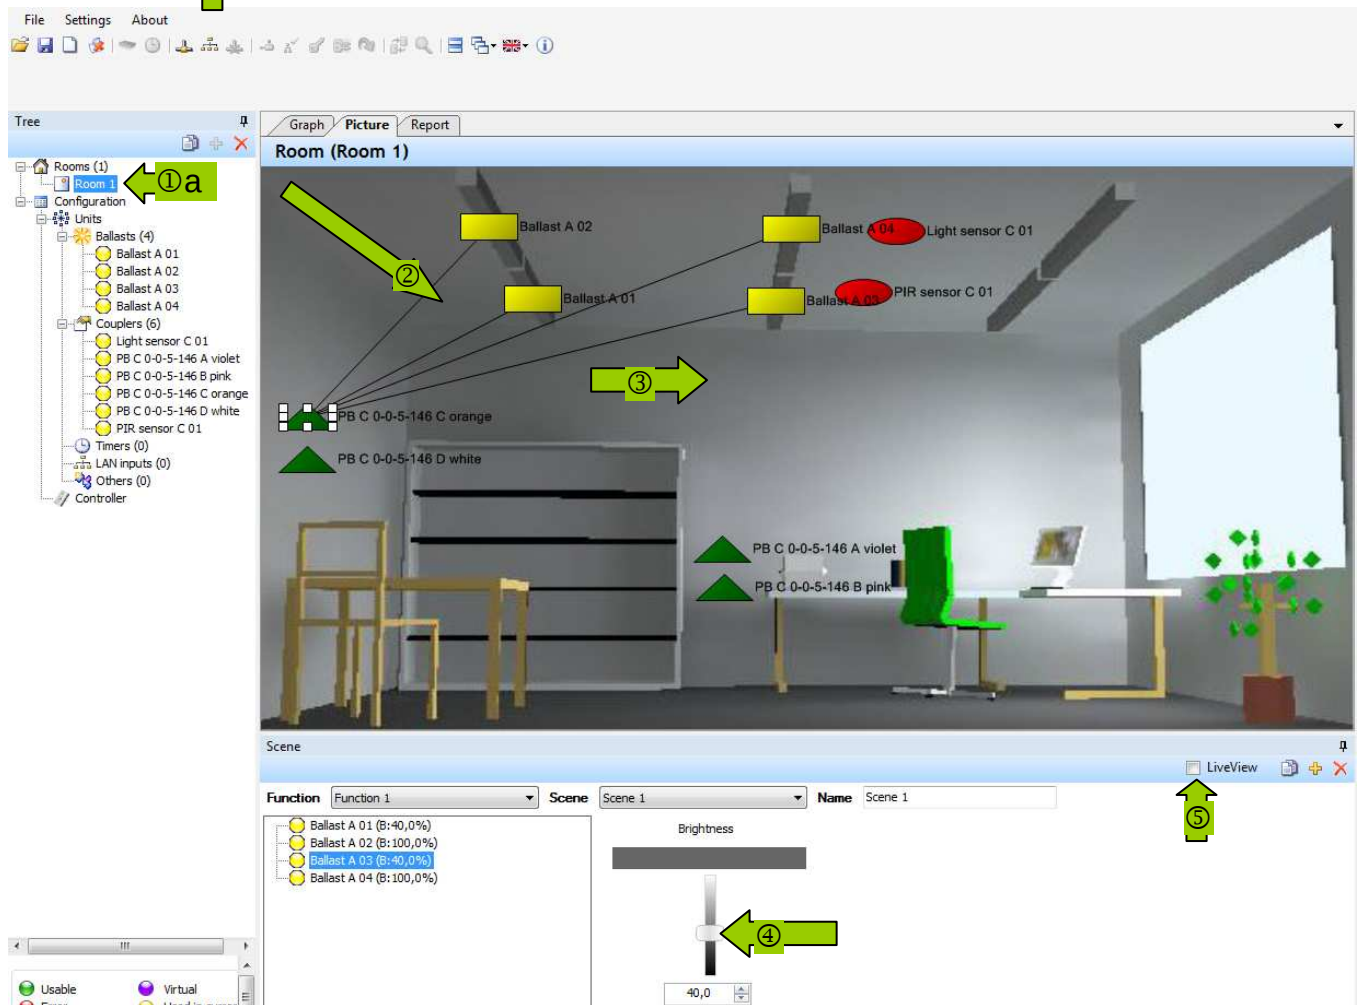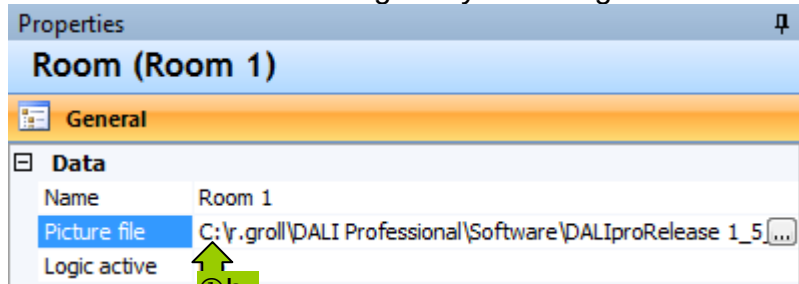

② Pull ballast symbols (yellow rectangle) to luminaire
Analog pull sensors, pushbuttons to requested position

③ Check connection lines

In example above all devices which are functional connected with the button

④ Create scenes (with slider) and store by 'Add'. Multiple selection of luminaires is possible.

⑤ Check screen luminaire against real luminaire with 'Live view'.

Do not forget to remove 'Live view' afterwards to avoid DALI traffic reduction.


! no configuration changes possible in this view, only in Graph view

Tunable White with Glasstouch Wheel


Use Glasstouch 6TR for continous change of colour temperature





Glass Touch 6TR
GT 6T R 01 bottom
GT 6T R 01 left top
GT 6T R 01 right top
GT 6T R 01 left middle
GT 6T R 01 right middle
GT 6T R 01 left bottom
GT 6T R 01 right bottom
GT 6T R 02 Top

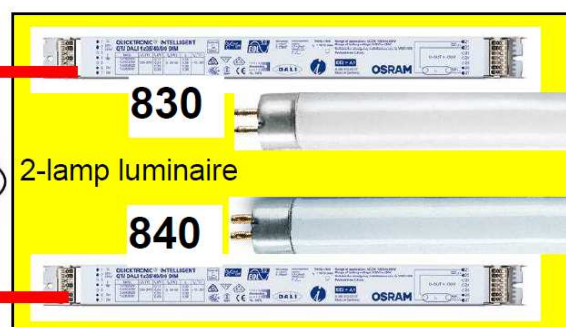

Configure 'Left Long press' to Dimm down and 'Right Long Press' to Dimm up for one ECG and 'Left Long press' to Dimm up and 'Right Long Press' to Dimm down for the other

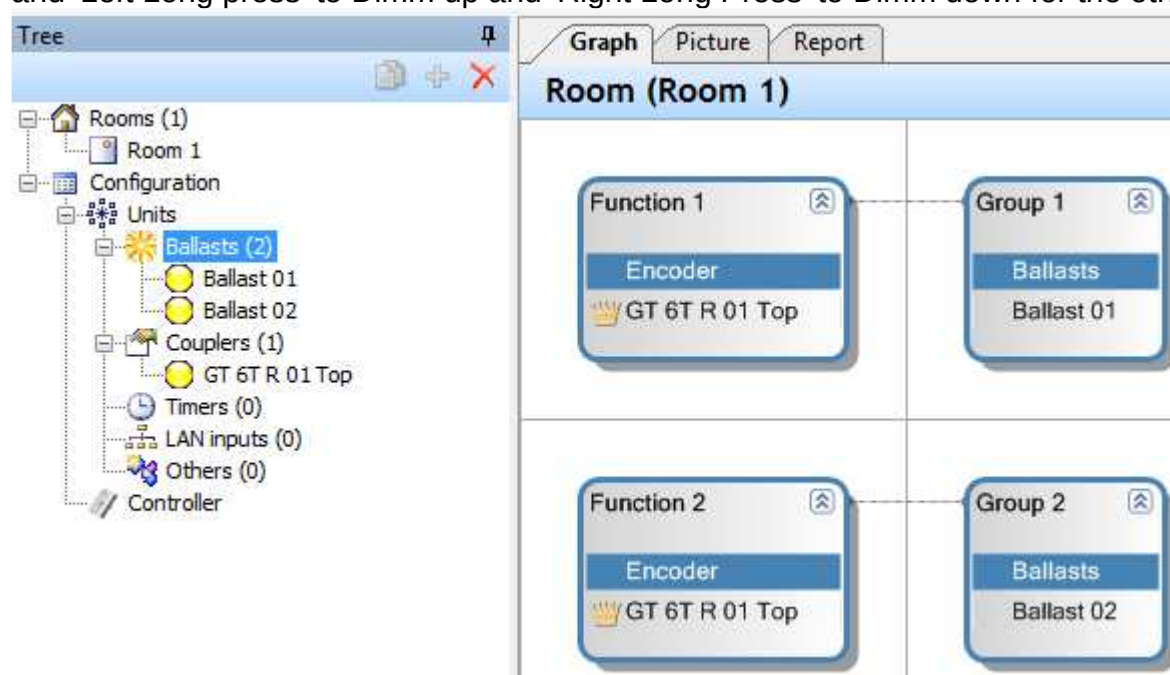

The crown occurs as reminder because same input device button is used in different functions

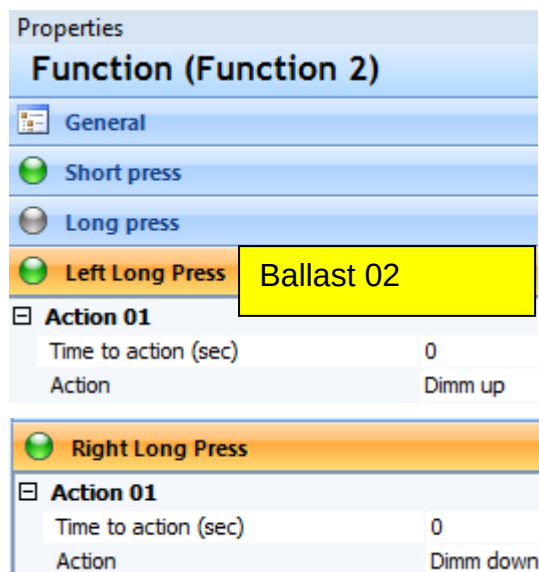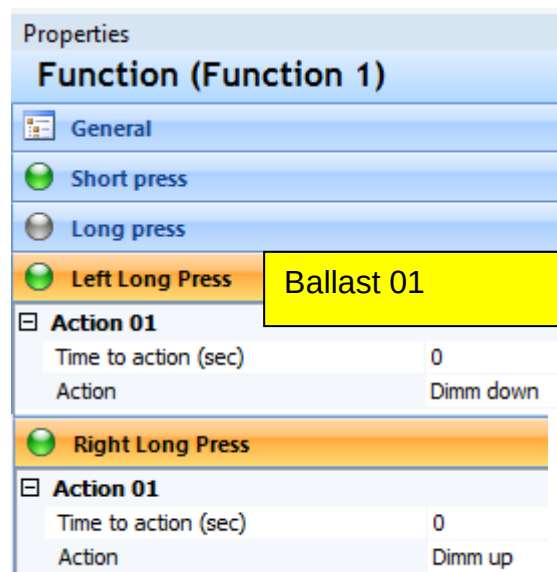


Disable Shortpress, Longpress, Doublepress for the button 'Top' to avoid unwanted activation during wheel turn by the button in the middle.


Use of internal relay

The 4 internal relays K1...4 can be switched with pushbutton / PIR or used in action lists.

How to use : click 'Relay' in Action

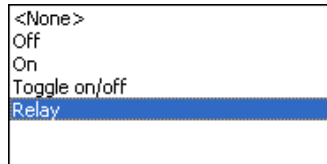


Define a function e.g. with ECG and add the relay (here : ON immediately, OFF after 5 minutes)

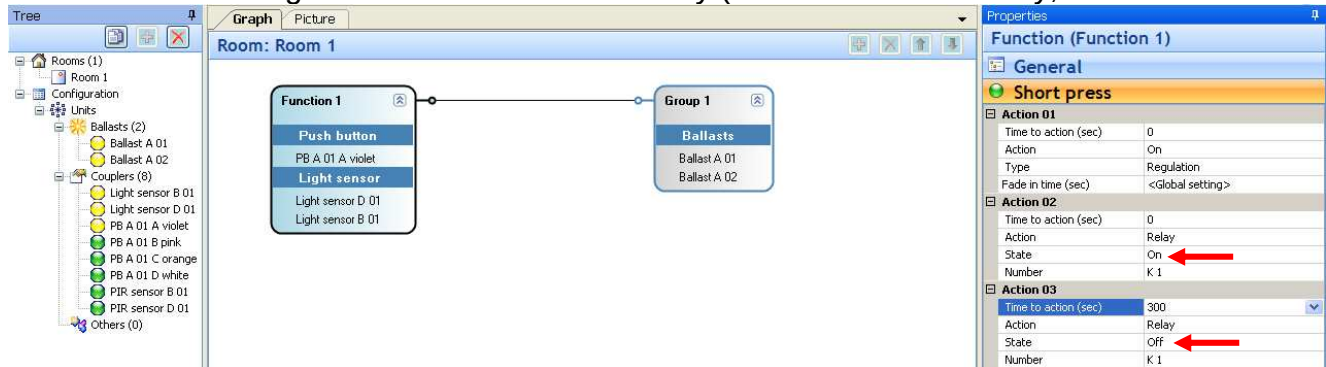

Multiple use of Pushbutton (Crown Function)


Start several functions from one pushbutton e.g. regulation ON for one group + lightlevel 30% for other group. With this a crown appears PB A 01 A violet to show the multiple use of the button

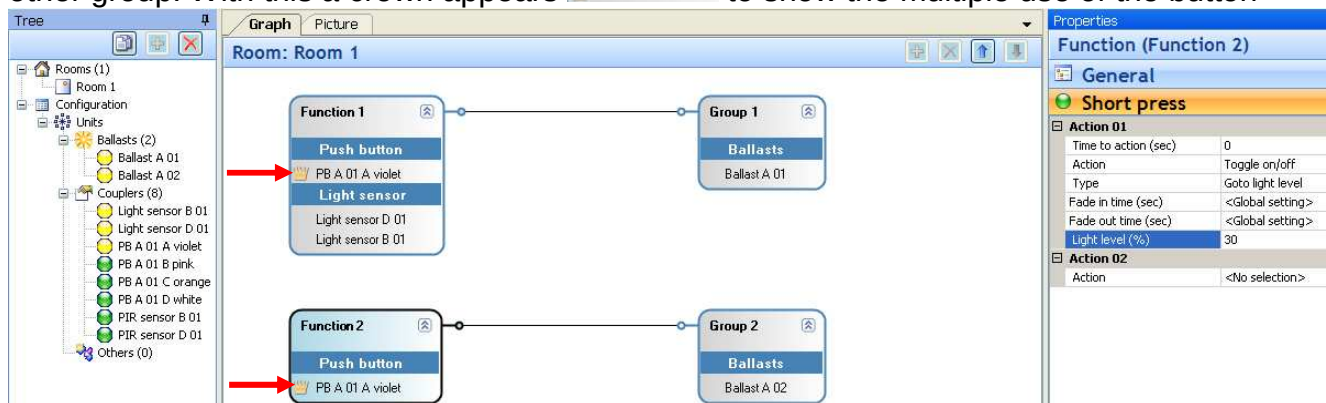


Change Pushbutton to Switch Input

If a switch is connected

Click pushbutton in device tree, change properties from pushbutton to switch

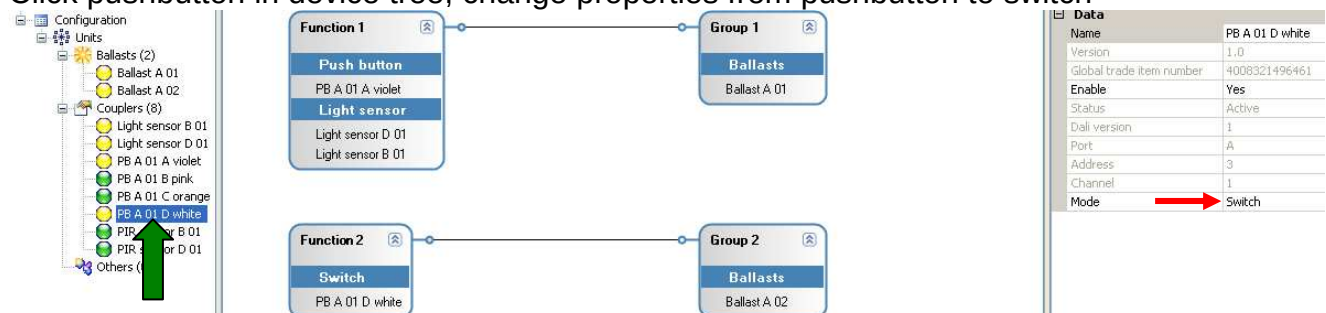

Now new handling parameter occur: Opening + Closing

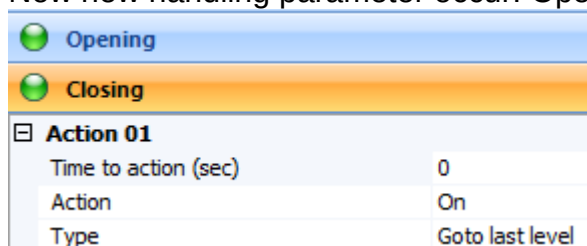


Switch Interactions - Parallel / Serial Connection of Switches

The switch interactions functionality enables the configurator to set the behaviour of the actions for the open/close event.

- Works only for devices configured as switches
- The maximum number of switches in this function is 16
- The switch interactions are only valid for the function where it is configured
- Three types of switch interaction are defined
- The default behaviour is toggle

Configuration of the switch linkage in 'Function / General'

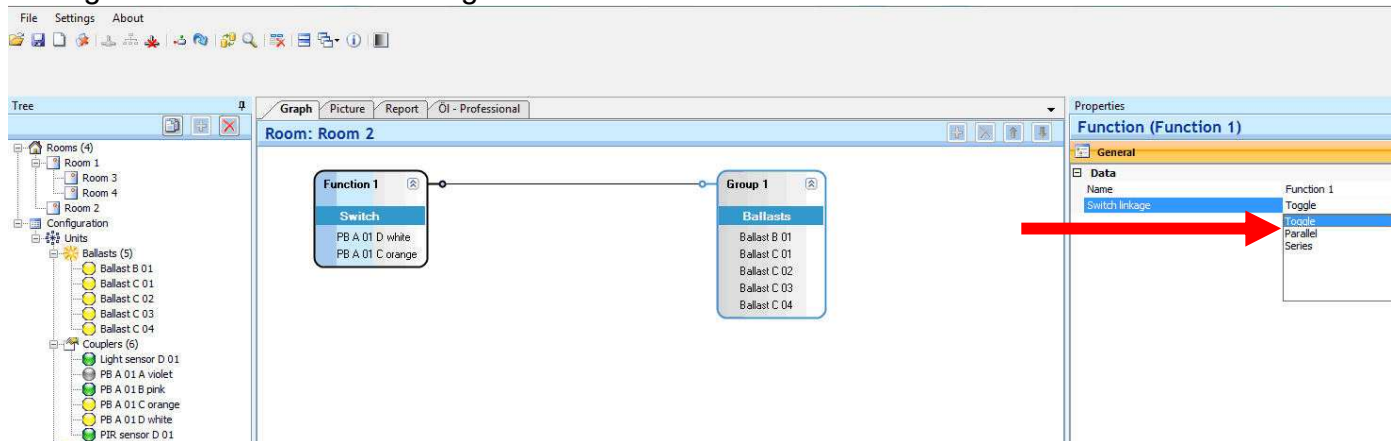


- o **Toggle** (default setting)
 - Independent behaviour of each switch, triggered by event (opening/closing)

- o **Parallel** (only off if all off)

- **Logic Table Parallel = OR**

switch status	s1	s2	s3	Result
1	0	0	0	0
2	1	0	0	1
3	0	1	0	1
4	0	0	1	1
5	1	1	0	1
6	0	1	1	1
7	1	0	1	1
8	1	1	1	1

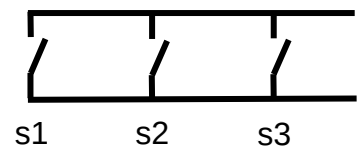


- 0 = open / off, 1 = closed / on
- Every closing event from any switch (s1,s2,s3) will re-trigger the action list

- o **Serial** (only on if all on)

- **Logic Table Serial = AND**

switch status	s1	s2	s3	Result
1	0	0	0	0
2	1	0	0	0
3	0	1	0	0
4	0	0	1	0
5	1	1	0	0
6	0	1	1	0
7	1	0	1	0
8	1	1	1	1

 

- 0 = open / off, 1 = closed / on
- Every opening event from any switch (s1,s2,s3) will re-trigger the action list

Preselect Lightlevel- Option of Several Lightlevel for Events

Enables to store user defined light levels for all groups connected with a function into the controller. This lightlevels can be recalled at any time.

- 2 types of level can be used:
 - Fix light levels stored with configuration
 - Current light level.


If the ballasts have different levels the maximum from all levels will be used.
- The last value stored will be recalled with 'Goto stored light level' command.
- Does NOT work for scene single ballast values, NOT for regulation values
- The default value is 80% (DALI value 246)
- New action:
 - Store light level:

Selects light level (fixed or current) for the connected groups and stores it on the controller. But no change in the current light situation of the project
- New action type (to be used in On or Toggle action):
 - Goto stored level:


Recall the stored lightlevel to the ballasts of all connected groups.

The 'Goto stored level' command uses the latest value that has been saved.


Select FIX light level and store the value to controller:

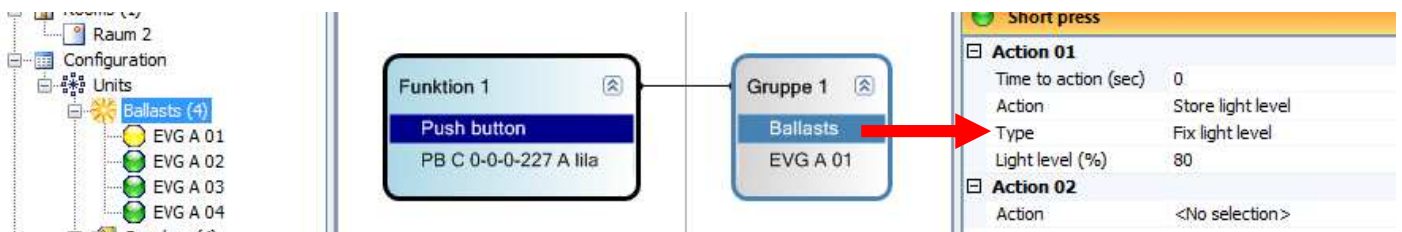

Select CURRENT light level and store the value to controller:

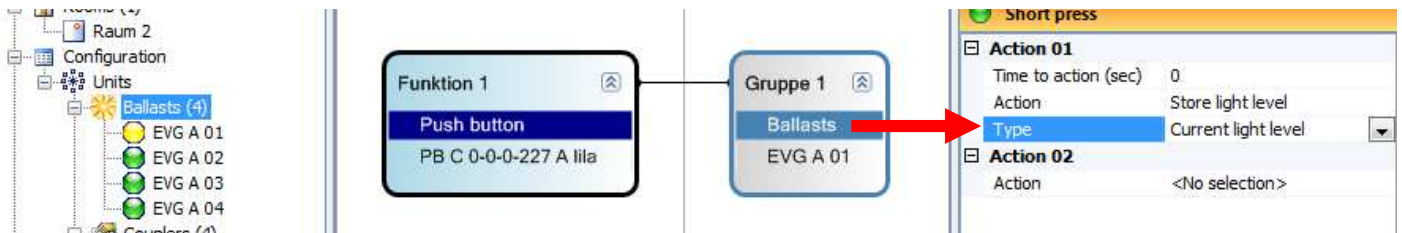

RECALL light level from controller:

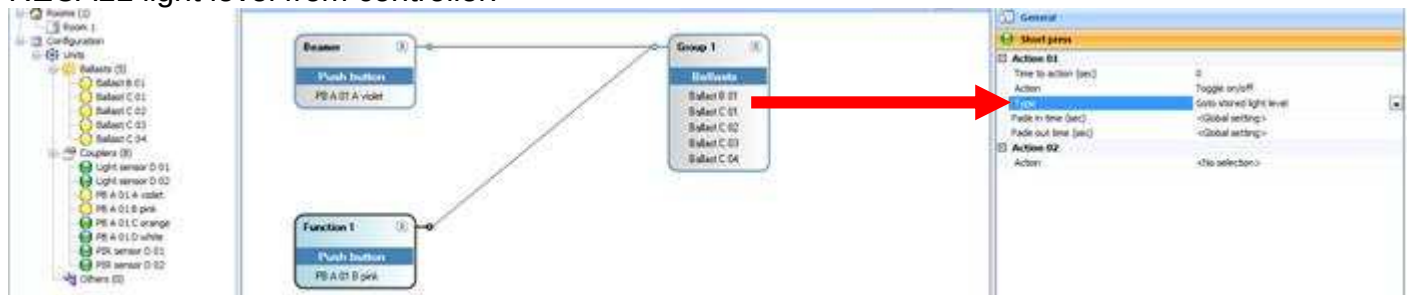


PIR Sleep Mode - Option to Disable Occupancy Sensor


The PIR sleep mode allows to enable and disable the PIR sensor in a function.

- Two new actions to be created:
 - PIR enable: activates all PIR functionality of these function
 - PIR disable: blocks all PIR functionality
- If the PIR is disabled there has to be at least one enable of the PIR, otherwise there will be an error
- Works only for sensor couplers (NOT for switches, NOT for pushbuttons)
- The function influences all connected groups of the function
- The action can be called by: Short press, Double press, Opening, Closing


Enable PIR

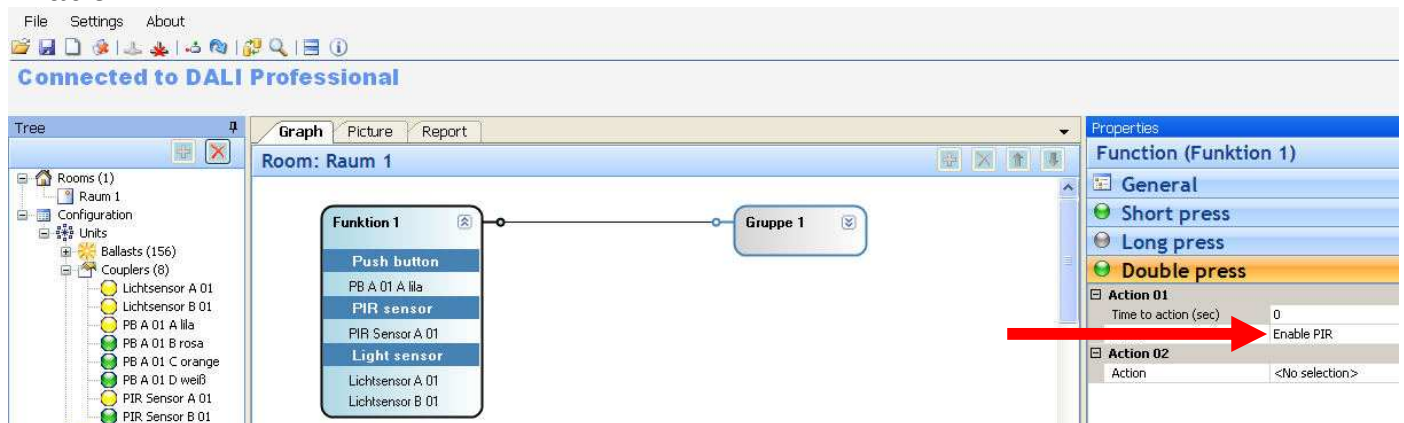


Disable PIR:

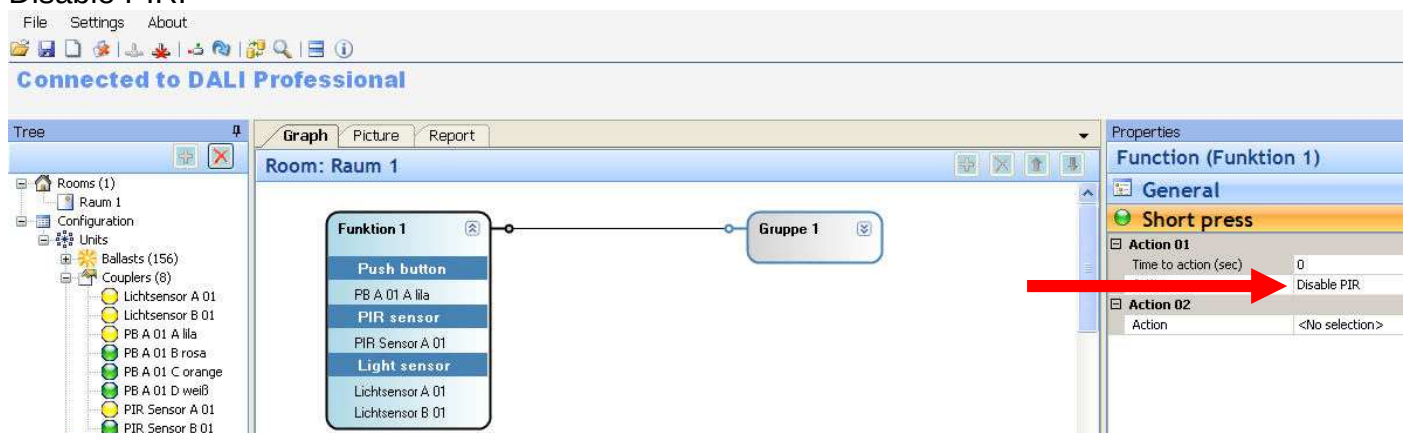

Error when disabled and not enabled:

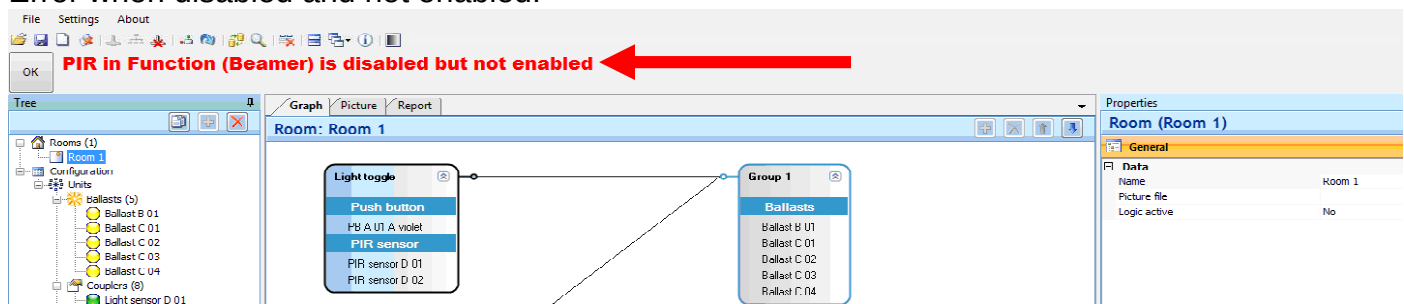

Error when disabled and not enabled (red dot):

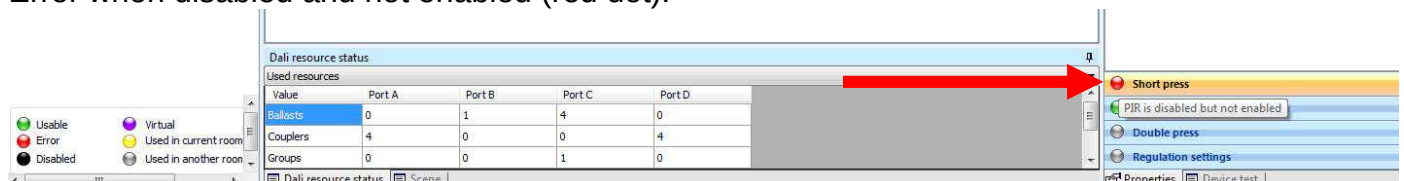

Report Lamp Failure to Relay


The lamp failure reporting allows to connect DALI PROFESSIONAL to a superior BMS.

A lamp failure in DALI line A..D closes the according relay K1..4


- 'Check lamp failure' has to be set to 'Yes'
- Default value = 'No'
- Controller checks all DALI lines every 10 seconds for lamp failure
- DALI line A is related to relay K1, B to K2, C to K3, D to K4
- Contact open if no lamp failure detected
- Contact closed if a lamp failure occurs
- Contact opens again if lamp failure vanishes
- If relay already used for another function a failure message occurs
'Relay already used to report lamp failure'

Configuration process :

- ① set 'Check lamp failure' = 'Yes'
- ② set 'Report lamp failure' = 'Internal Relays'

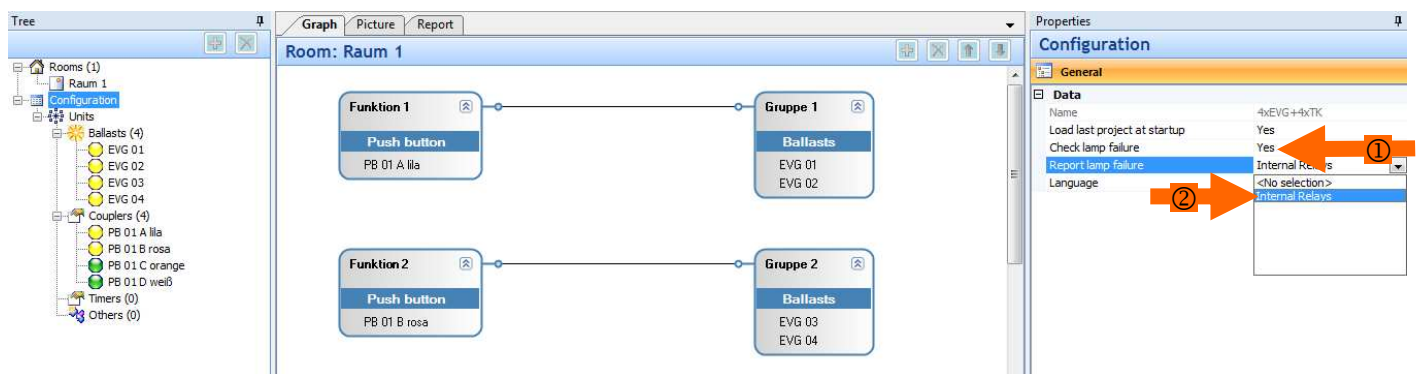

 If the relays are already used for lamp failure monitoring
a second use in a function will generate a failure message




Global Change of ECG Parameters


Change of ECG Parameter is also possible on global level for the whole project at once. This avoids a lot of extra work during setup if changes for all ECG are necessary.

- ECG Parameters to be set : “SystemFailureLevel” and “PowerOnLevel”
- Default values = ECG factory settings
- The default value for the ballasts will be “General setting”
- When using an old configuration, all ballasts showing DALI value = 254 as “SystemFailureLevel” and / or “PowerOnLevel” will be set to use general settings. Ballasts with other values will be set to their individual settings.

“SystemFailureLevel” and “PowerOnLevel” can be changed global for all ballasts in “Properties/Units/General”.

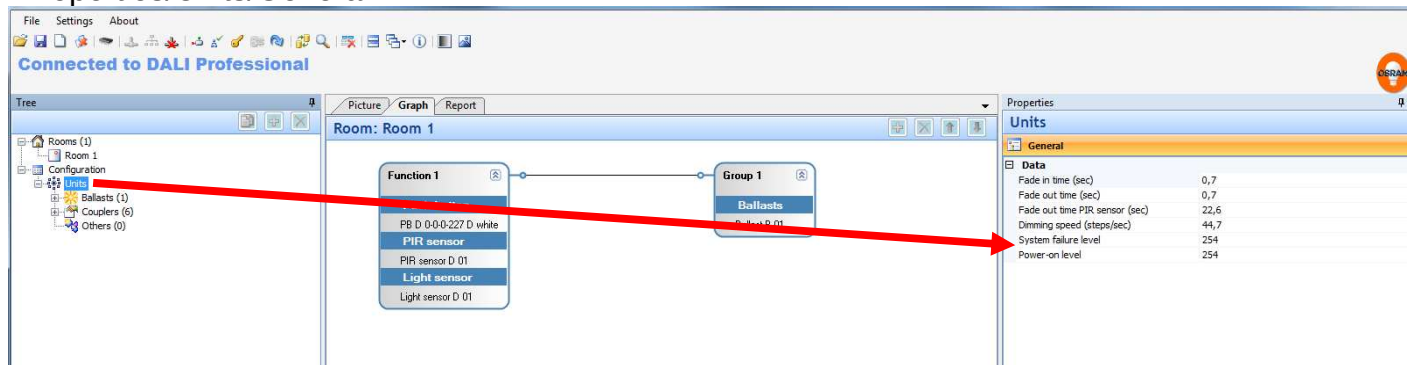

To use the general settings for a individual ballast the “System failure level mode” or the “Power on level mode” has to be set to “General setting”. If set to “Individual setting” a ballast specific value can be set.

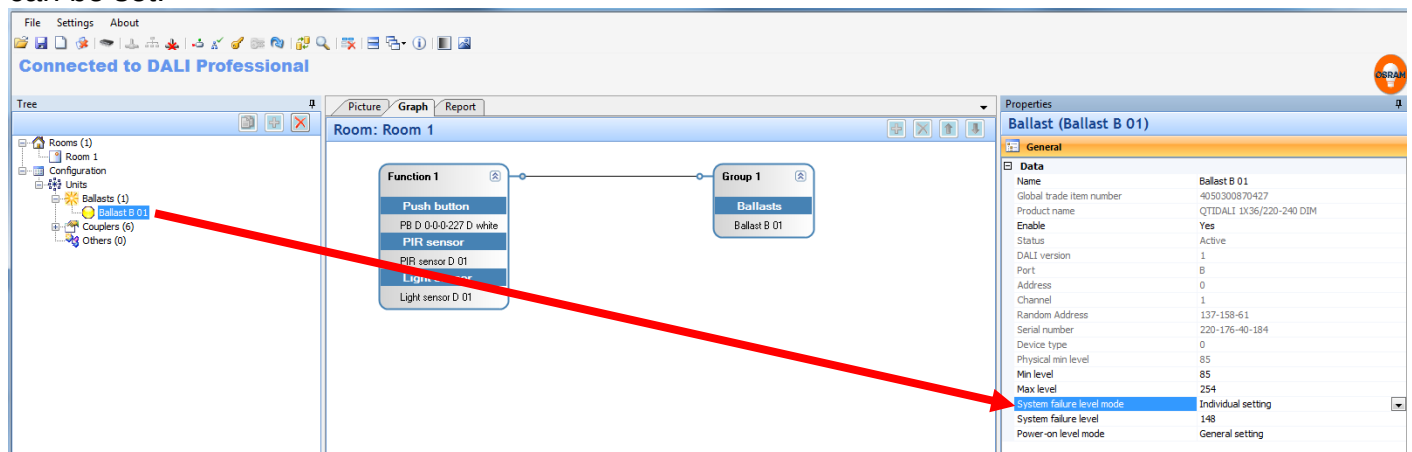

General	
Data	
Name	Ballast B 01
Global trade item number	4050300870427
Product name	QTIDALI 1X36/220-240 DIM
Enable	Yes
Status	Active
DALI version	1
Port	8
Address	0
Channel	1
Random Address	137-158-61
Serial number	220-176-40-184
Device type	0
Physical min level	85
Min level	85
Max level	254
System failure level mode	Individual setting
System failure level	148
Power-on level mode	General setting


Attention Message :

Be careful with SystemFailureLevel changes in emergency relevant installations.

Copy Room within Configuration


With the copy room functionality it is possible to create a copy of an existing room which contains all devices, functionalities, parameters ..

- Works for:
 - o Standard rooms
 - o Logic controlled rooms
- To copy a room select the room to be copied in tree and press “Copy button” in toolbar
- These settings of a room will be copied
 - o Used devices (ballasts, couplers...).
All copied devices will virtual status. They have to be merged later in setup with existing installation devices.
 - o Groups
 - o Functions
 - o Scenes
 - o Regulation settings
- Copy of a logic room will show all rooms including sub-rooms
- The name of the copied room will be the old name and added *Copy#x*, where x is the counter of the copy. E.g. *Room 1* in copy will be *Room 1 Copy#1*
- The name of the copied settings (devices, functions, groups....) will be the name plus the name of the copied room. E.g. *ECG 1* in copy will get *ECG 1 @ Room 1 Copy#1*
- The room drawing in picture view cannot be copied.

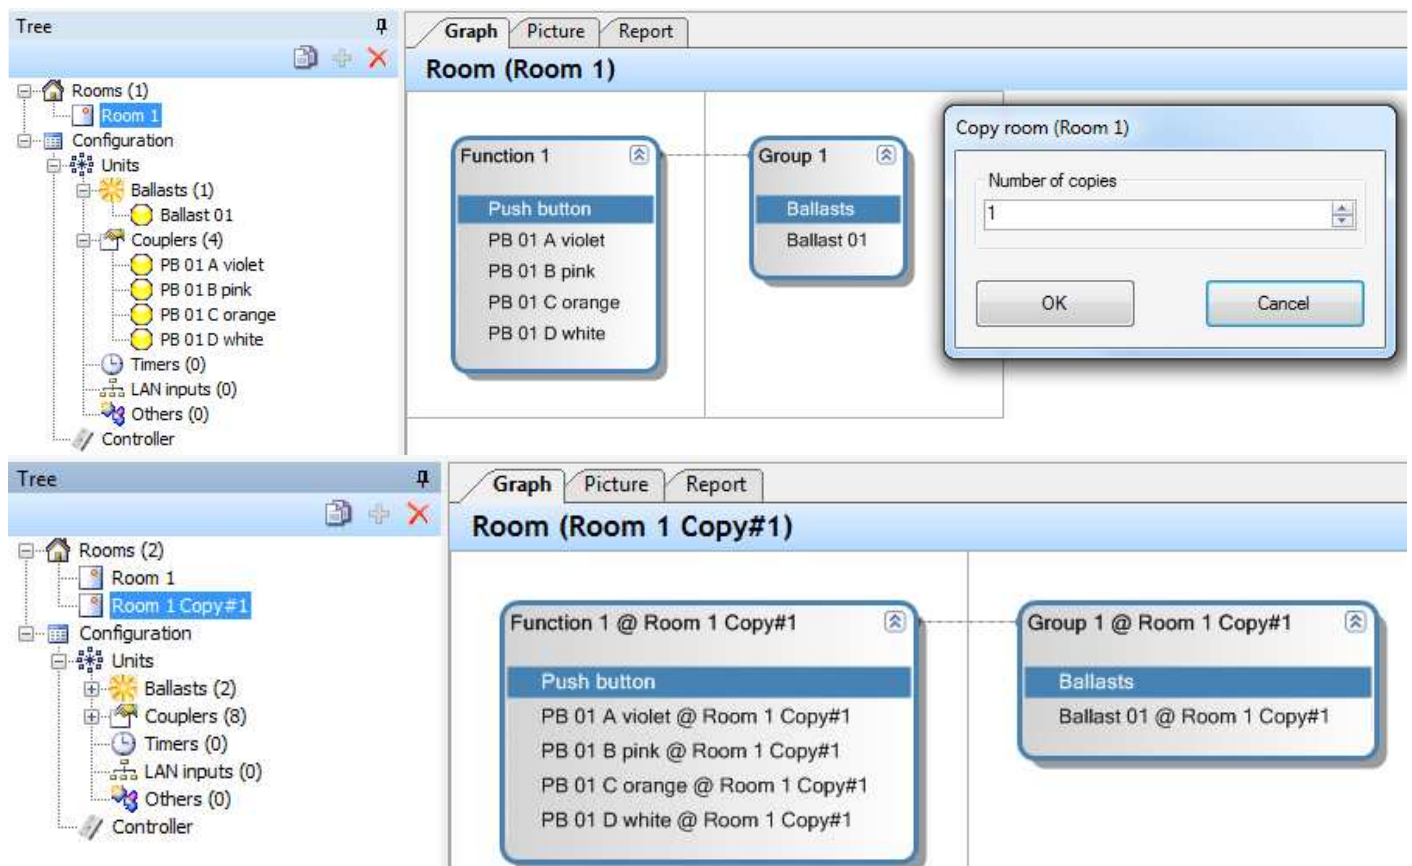

Application Type Setting

In industrial installations the PIR function should work in a different way than in offices. For this reason the configuration can support different application types:

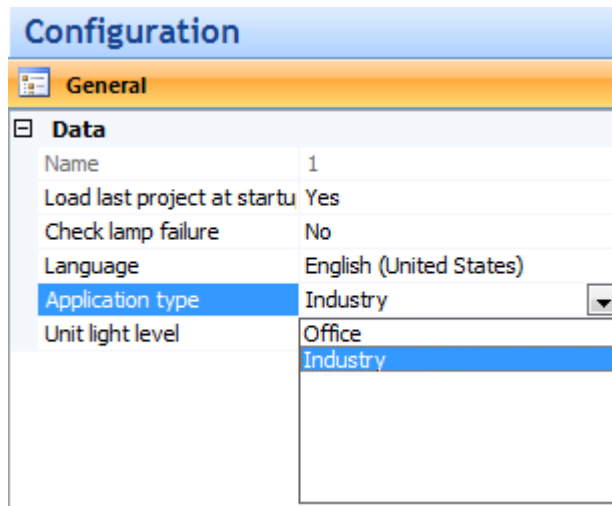

The screenshot shows a 'Configuration' window with a 'General' tab. Under the 'Data' section, there is a table of settings. The 'Application type' is set to 'Industry'.

Data	
Name	1
Load last project at startu	Yes
Check lamp failure	No
Language	English (United States)
Application type	Industry
Unit light level	Office
	Industry

Application Type Office (default)

As already implemented in former versions

- The first PIR action will work as follows:
 - If not all lights in the group are on, the PIR action will not change the situation
 - When all lights are on the action will not be executed (e.g. a manual arranged dimming level will not be changed)
- There is a 30s lock time for PIR actions to give the opportunity to leave the room after switching off the light without new triggering.
- If movement is detected the PIR event is send every 10s.

Application Type Industry

- The first PIR action will work as follows:
 - Even if not all light are on in the group, a PIR action will execute the according action
 - When all lights are on the action will not be executed (e.g. a manual arranged dimming level will not be changed)
- There is no 30s lock time for PIR actions, but when movement is detected the event is send only in 10s frame.


Check Configuration - Matching Test for Configuration to Components

With the new button it is possible to check a currently used configuration against the connected physical components. Helpful if you are not sure if all ballasts / couplers are currently connected properly during an ongoing installation work.


Limitations :

- if there are unused additional devices there will be no message
- only DALI device connections are checked, for e:bus only the gateway is relevant

New button in Menu Line

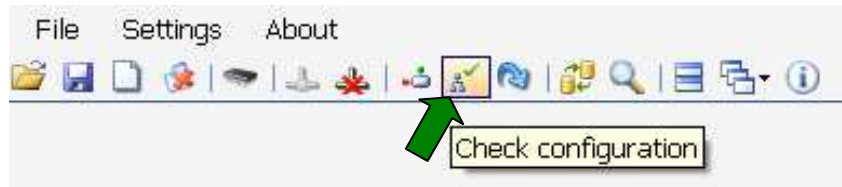


View during Check

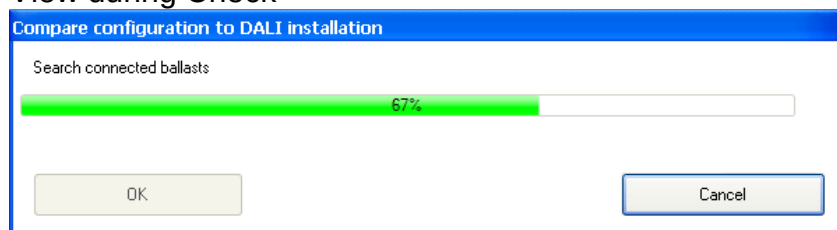


View if all is o.k.



View if **mismatches** are existing

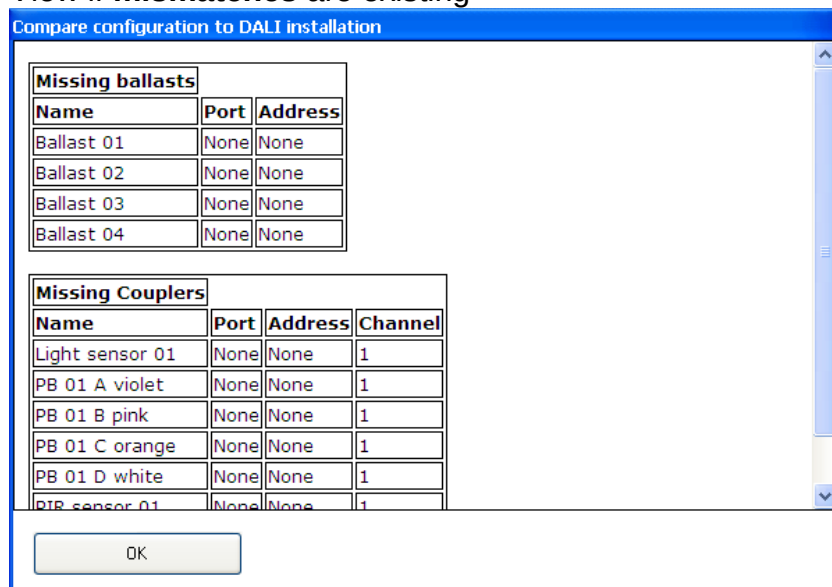

Result in Message Line

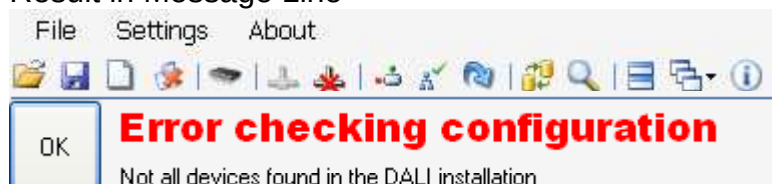

DALI PRO Testfunctions

Single Device Test - Check for Correct Device Assignment

ECG, pushbuttons, lightsensor, PIR can be tested according to correct assignment in the room.

- ① Click to device in device tree, use 'Device test' in right window
- ② Start Test, for input devices the according operation has to be done e.g. pushbutton press
- ③ A green area will occur and the device name and event type is shown

The screenshot shows the DALI PRO software interface. On the left, the 'Tree' panel shows a hierarchy of rooms and units. A purple arrow ① points to a device in the tree. The main window shows a 'Room: Raum 1' configuration with a 'Funktion 1' block containing 'Push button', 'Switch', 'PIR sensor', and 'Light sensor'. A purple arrow ② points to the 'Device test' button in the top right. The 'Device test' panel on the right shows a green status indicator and a 'Push button' event log with details: Name: PB A 0-0-6-150 A IIIa, Type: Long press, Time: 08.11.2011 13:59:15. A purple arrow ③ points to the green event log area.

Single Device Test - Button

includes test button to start virtual the according function

The screenshot shows the 'Device test' window for a push button. It has a 'Stop' button and a green status indicator labeled 'Enabled'. Below, the 'Push button' section shows a 'Button pressed' event log with details: Name: PB A 0-0-0-197 A violet, Type: Short press, Time: 19.11.2013 15:02:39. At the bottom, there is a 'Test' section with a large empty box.

/ PIR Sensor

The screenshot shows the 'Device test' window for a PIR sensor. It has a 'Stop' button and a green status indicator labeled 'Enabled'. Below, the 'PIR sensor' section shows a 'PIR sensor' event log with details: Name: PIR sensor D 01, Time: 19.11.2013 15:06:35. There are also 'Switch Led' options: 'Always on' and 'Blink at movement'. At the bottom, there is a 'Movement' section with a large empty box and a 'Test' section with a large empty box.

Single Device Test - Lightssensor

includes magic eye for lightlevel / blink function

The screenshot shows the 'Device test' window for a light sensor. It has a 'Stop' button and a green status indicator labeled 'Enabled'. Below, the 'Light sensor' section shows a 'PIR sensor' event log with details: Name: Lichtsensor C 01. There are also 'Switch Led' options: 'Always on' and 'Blink at movement'. At the bottom, the 'Sensor value' section shows a yellow bar graph with the value 50,93 %.

/ Ballast

The screenshot shows the 'Device test' window for a ballast. It has a 'Stop' button and a green status indicator labeled 'Enabled'. Below, the 'Ballast' section shows a 'Blink interval' dropdown menu set to 2,0.


The screenshot shows the 'Device test' window for a ballast. It has a 'Start' button and a grey status indicator labeled 'Test not started'. A text box above the button says: 'If the next device shall be checked the test has to be started again with 'Start''.

Common Device Test - Check for Correct Device Functionality


ECG, pushbuttons, lightsensors, PIRsensors can be tested together for correct functionality

Common Ballasts Test

- ① Click to Ballast in device tree, use 'Device test' in right window bottom
- ② Start Test

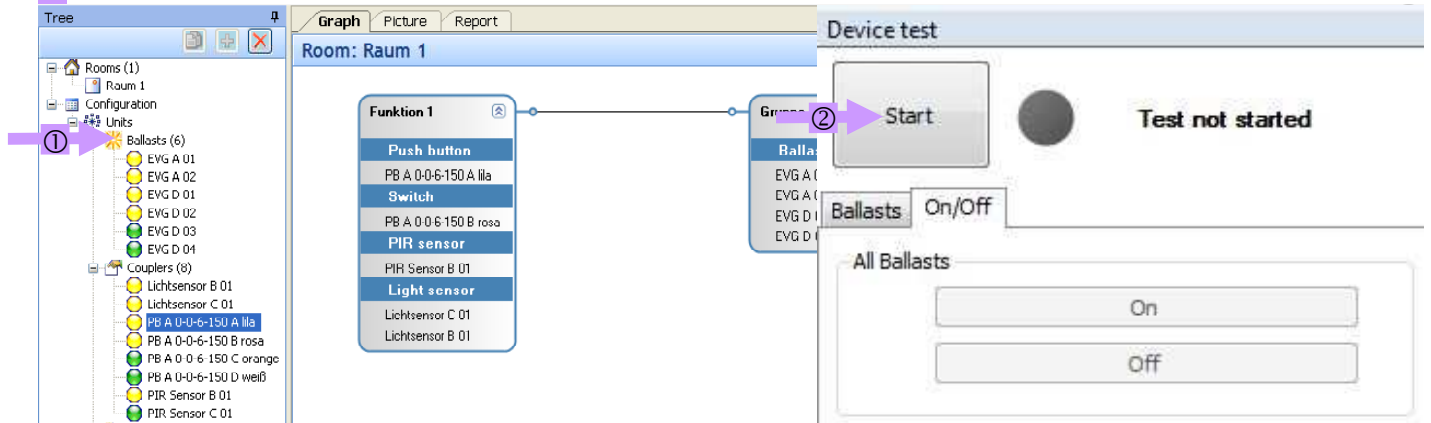

Now all ballast can be switched ON / OFF to localize non reacting luminaires

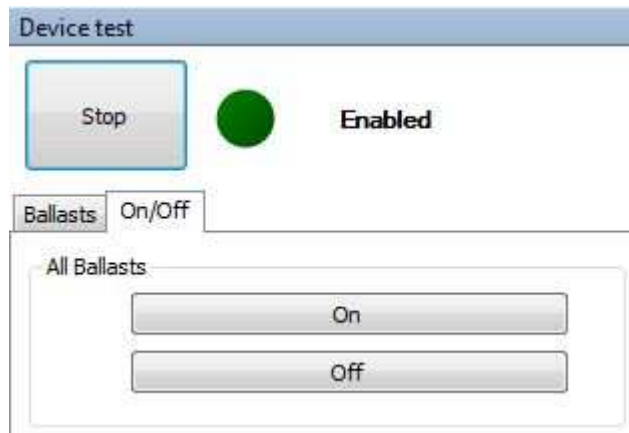


Test result for the luminaires which
 - not switch on -> no mains connected
 - not switch off -> no DALI connection

Common Device Detail Test

Ballasts can be checked for (temporary) wiring failures

ECG which do not answer to DALI commands will be shown as red dot

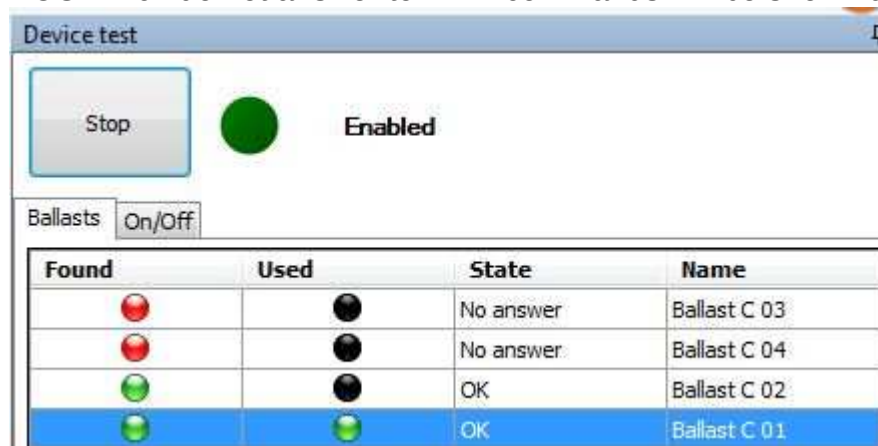

ECG connected to a failed lamp will be shown with red dot

Device test

Stop


Enabled

Ballasts

On/Off

Found	Used	State	Name
		Lamp failure	Ballast C 04
		OK	Ballast C 03
		OK	Ballast C 02
		OK	Ballast C 01

ECG which temporary lost connection to mains voltage will be found
Power failure message is shown even after recover until next light change (e.g. ON/OFF)

Device test

Stop


Enabled

Ballasts

On/Off

Found	Used	State	Name
		Lamp failure, Power failure	Ballast C 04
		Power failure	Ballast C 02
		Power failure	Ballast C 01
		Power failure	Ballast C 03

Finally all ECG should show green dots

Device test

Stop


Enabled

Ballasts

On/Off

Found	Used	State	Name
		OK	Ballast C 01
		OK	Ballast C 02
		OK	Ballast C 03
		OK	Ballast C 04

Button Test

Start Test and press each button to create according events.

Automatic sort concerning failure / no event (red dot) to top of row

Device test

Stop

Enabled

ButtonsPIR sensorsLight sensors

Found	Event	Used	Name
			PB A 0-0-0-197 C orange
			PB A 0-0-0-197 B pink
			PB A 0-0-0-197 D white
			PB A 0-0-0-197 A violet

PIR Sensor Test

Activate all PIR by movement to create events.

Automatic sort concerning failure / no event (red dot) to top of row

Device test

Stop

Enabled

ButtonsPIR sensorsLight sensors

Found	Event	Used	Name
			PIR sensor D 01
			PIR sensor D 02
			PIR sensor D 03

Lightsensor Test

Device test

Stop

Enabled

ButtonsPIR sensorsLight sensors

Found	Light level	Used	Value	Name
			37,05% (37,05..37,05%)	Light sensor D 02
			6,74% (0,00..7,82%)	Light sensor D 03
			8,50% (0,00..8,80%)	Light sensor D 01

Value changes >20% result in green level dot

when sensor reacted on change (e.g. light torch / shadow)

Device test

Stop

Enabled


ButtonsPIR sensorsLight sensors

Found	Light level	Used	Value	Name
			19,16% (0,00..100,00%)	Light sensor D 03
			8,99% (0,00..9,29%)	Light sensor D 01
			0,00% (0,00..100,00%)	Light sensor D 02

DALI PROFESSIONAL Configuration Report

Documentation of Configuration as HTML Report

- ① Go into menu folder 'Report'
- ② Use 'Create Report' to generate a HTML file of the current configuration

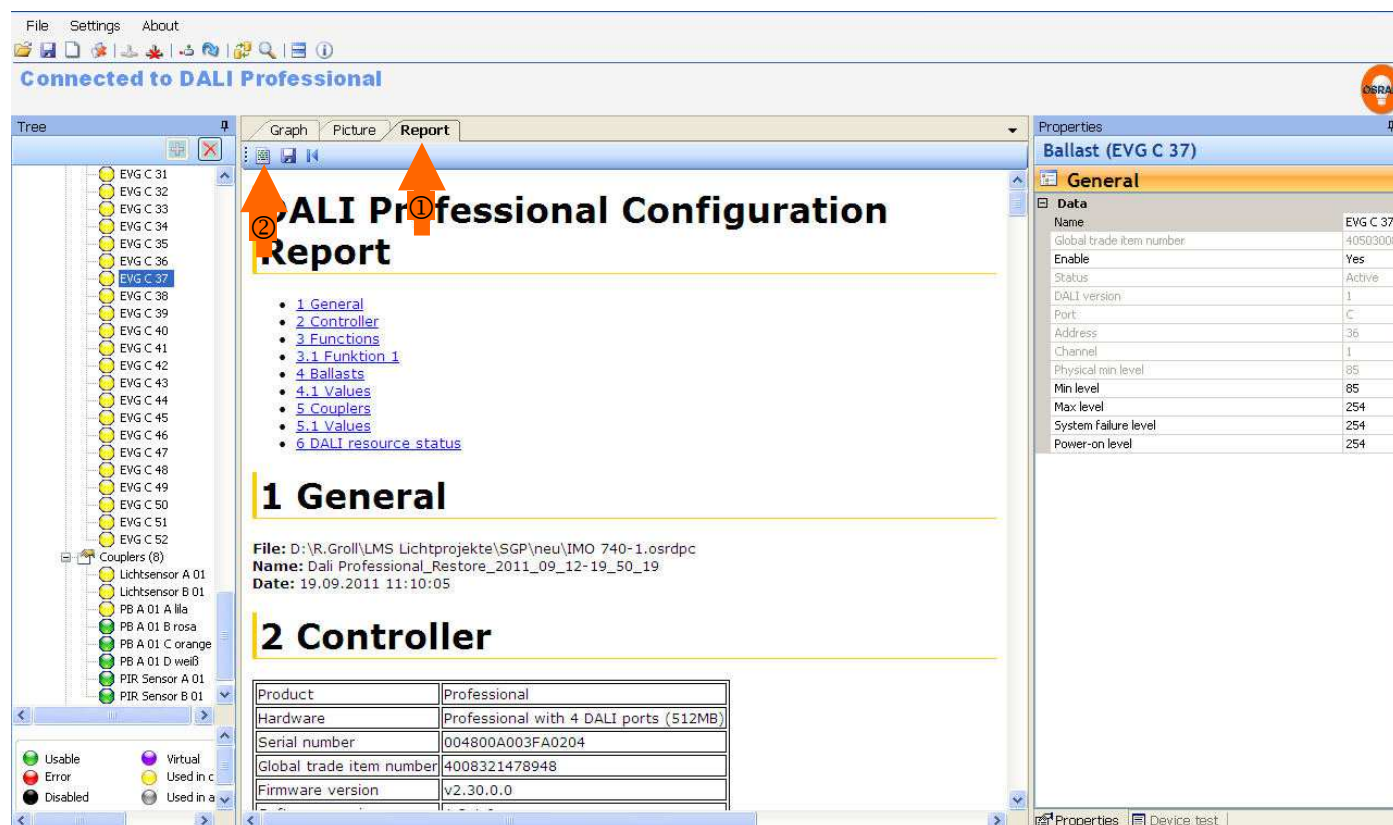


Then view or store the HTML document for documentation of final project status.
Document also can be printed with right mouse button menu.

Upload Configuration to Controller

Store DALI PROFESSIONAL configuration with 

With this the controller first will get configured by upload project, then automatically the original configuration file xxxxx.osrdpc will be stored additional on the controller.


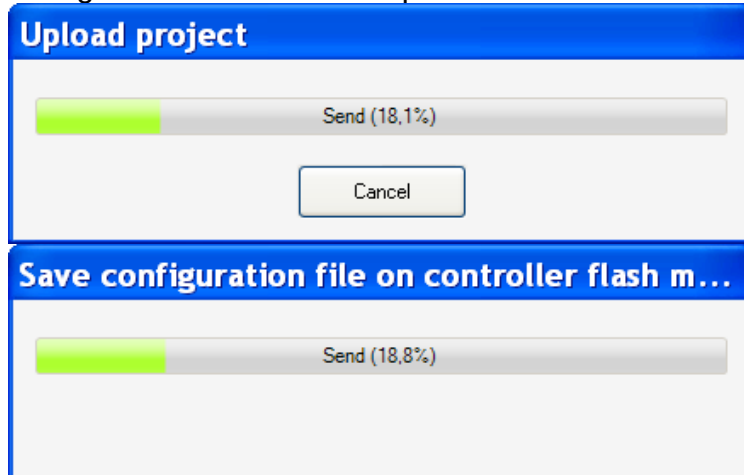


A warning message will occur if the project size will exceed 200K (the largest projects we have created show 70K). If this message occurs the configuration is uploaded to the controller, but the project file is only stored on the PC.

Download current Configuration from Controller




- ① connect by USB with PC, click to the connection symbol
- ② click to download existing configuration file from controller

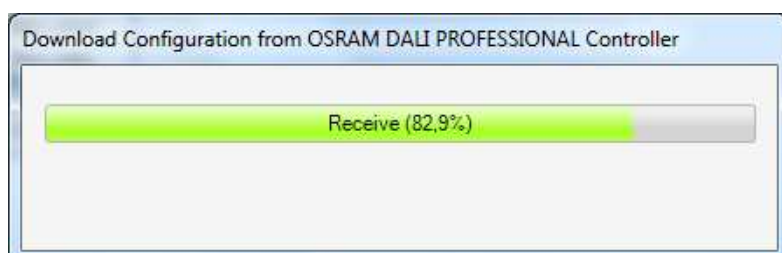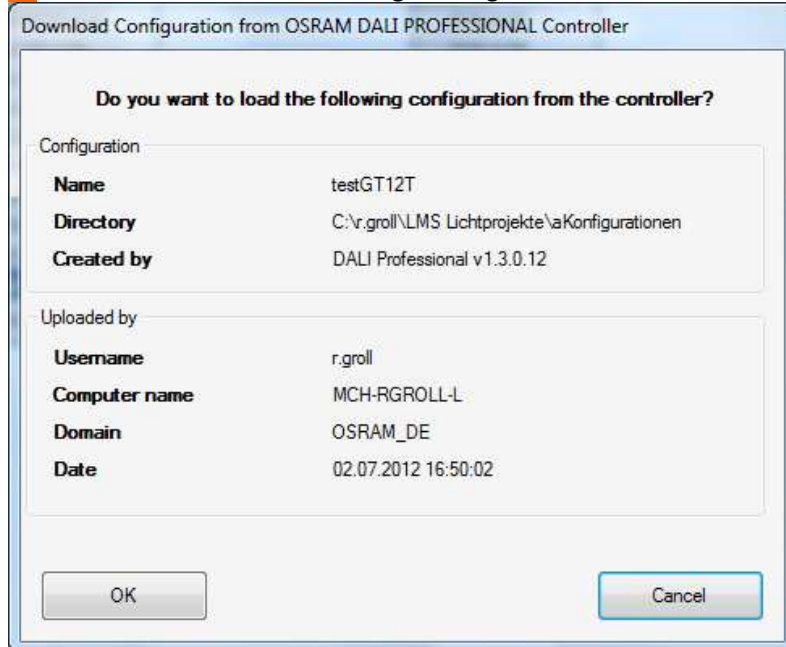


Download only works if project is uploaded before with DALIpro $\geq$ v1.3.0.0.

Simultaneous View of Picture and Graph - Design of View Window

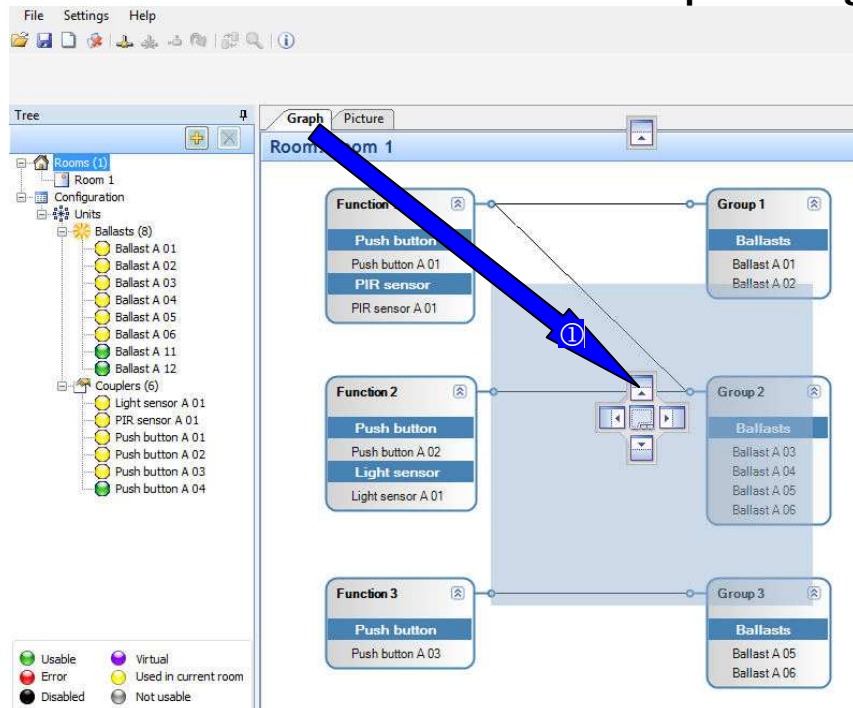

① click marker tab and pull to requested position in this case above Picture view

② result :

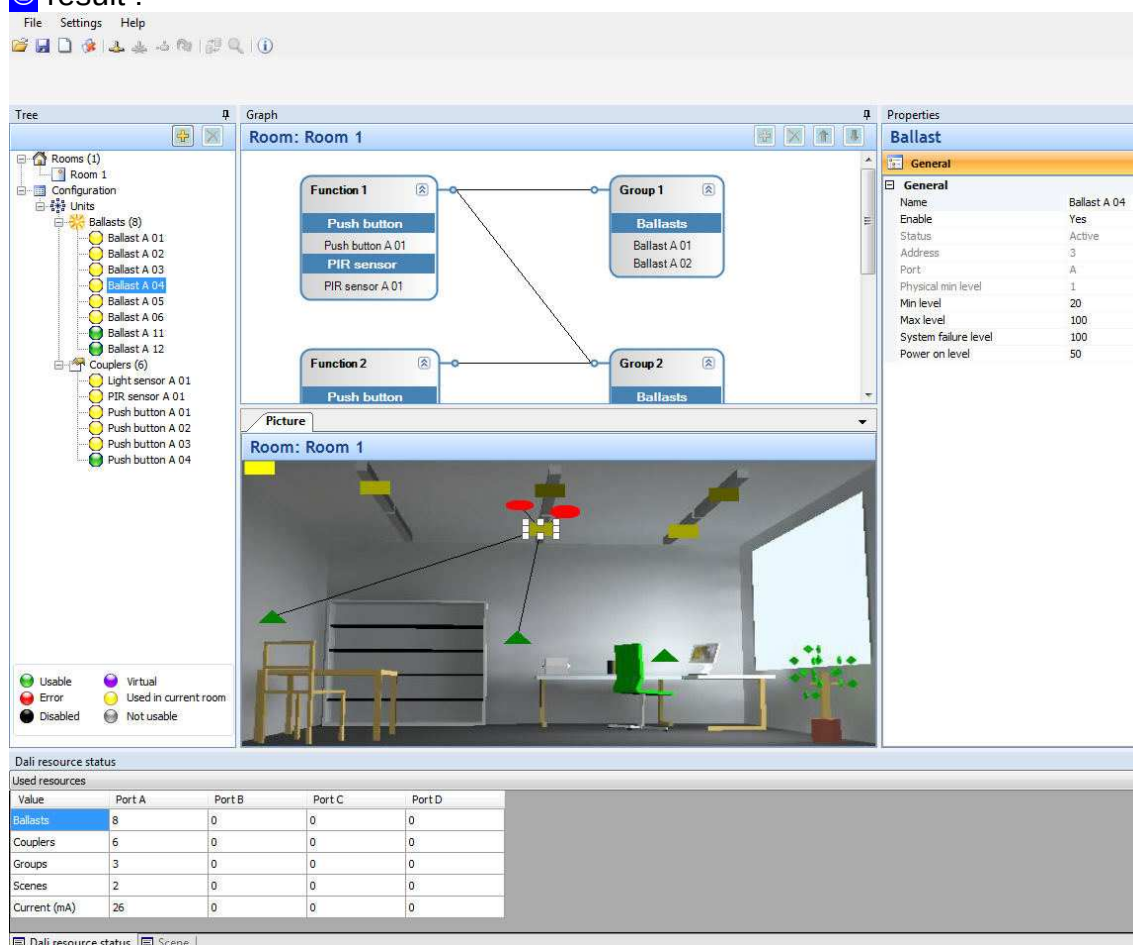

Reset of window design


Click 'Reset layout' symbol, close software and start software again




Firmwareupgrade Controller

With every new GUI-Softwareupgrade e.g. from OSRAM Internet www.osram.com/software) the latest firmware for the controller is automatically included. The upgrade is done by USB connection to controller

Open OSRAM DALI Professional software, click  in menu line
click marker tab 'firmware update' -> search, choose, update

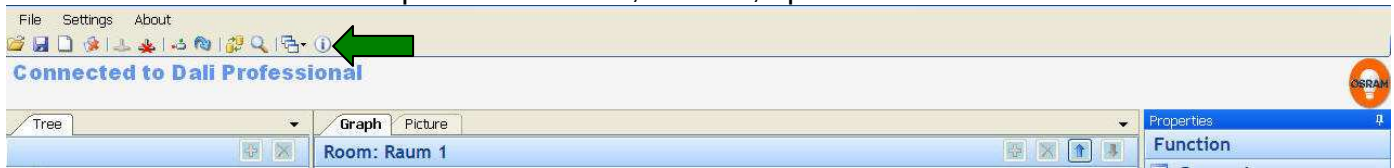


Screens for start of firmwareupgrade

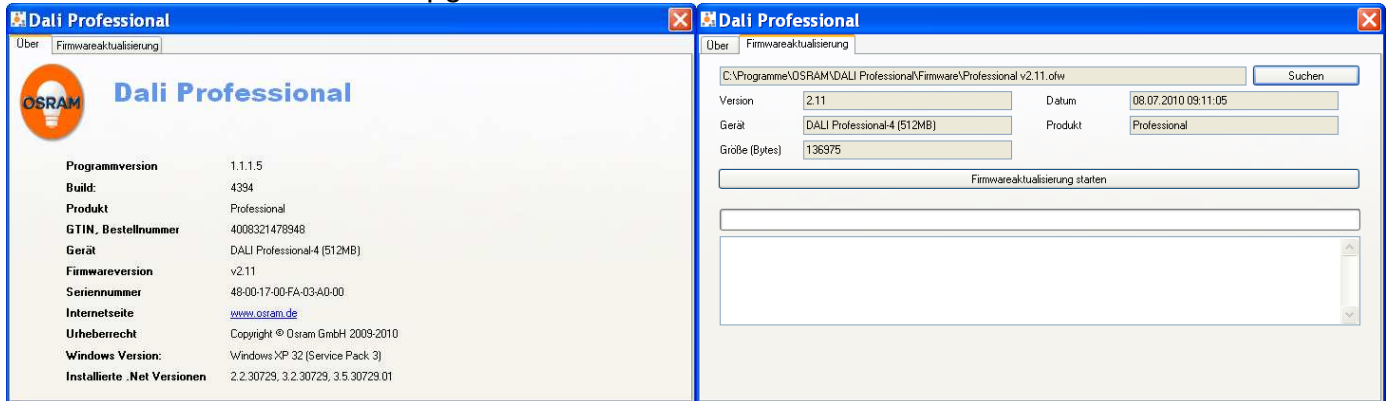

Default path for firmware (stored there with software installation)

C:\Program Files\OSRAM\DALI Professional\Firmware

Screen during installation

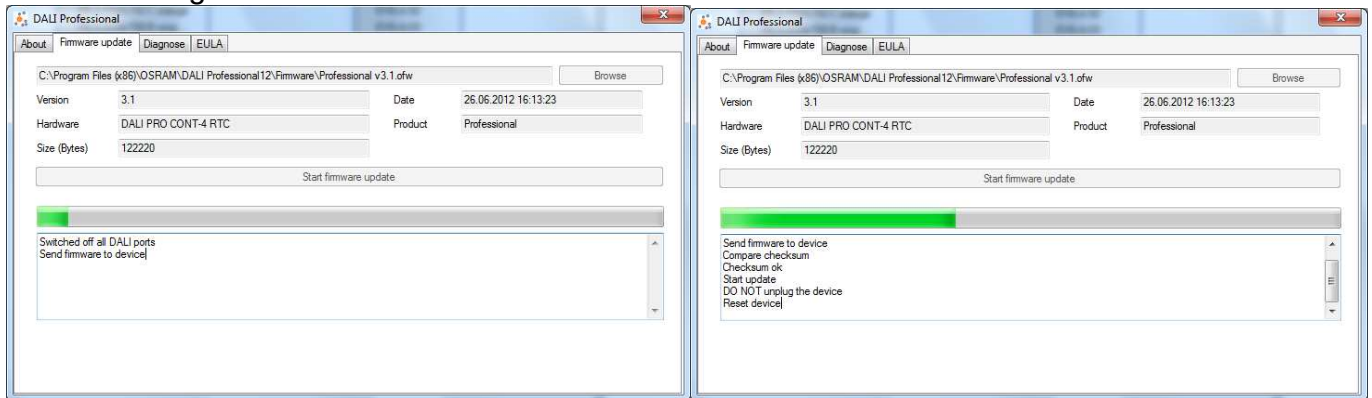

When update finished - close window, reset controller by mains voltage / USB interruption
Wait minimum 10 seconds, connect controller mains voltage / USB again.

Now the installation is available with new firmware
with click to  in menu line the new loaded version number shows up.

Detailed Controller Informations

Click on controller on bottom of device tree - General Controller Data visible

The screenshot shows a software interface with a 'Tree' panel on the left and a 'Properties' panel on the right. The 'Tree' panel shows a hierarchy: 'Rooms (1)' containing 'Raum 1', 'Configuration' containing 'Units' which includes 'Ballasts (8)', 'Couplers (20)', 'Timers (0)', 'LAN inputs (0)', and 'Others (0)', and finally 'Controller' at the bottom. A red arrow points from the 'Controller' item in the tree to the 'Controller' tab in the 'Properties' panel. The 'Properties' panel has tabs for 'Controller', 'General', and 'State'. The 'General' tab is active, displaying a table of data for the controller.

Controller	
General	
Data	
Name	Osram
Product	Professional
Hardware	DALI PRO CONT-4 RTC
Global trade item number	4008321710871
Serial number	004800A003FA0C01
Firmware version	3.11
Configuration on Controller	te
Created by	DALI Professional v1.5.0
Date	19.11.2013 15:03:49
Username	w.kaa
Computer name	TRTPC40128
Domain	OSRAM_DE

Status Messages

This screenshot shows the 'Controller' tab in the 'Properties' panel. The 'State' tab is selected, indicated by a green circle icon. The 'Data' section shows 'Controller' with the status 'Running'.

Controller	
General	
State	
Data	
Controller	Running

This screenshot shows the 'Controller' tab in the 'Properties' panel. The 'State' tab is selected, indicated by a red circle icon. The 'Data' section shows 'Controller' with the status 'No power supply'.

Controller	
General	
State	
Data	
Controller	No power supply

This screenshot shows the 'Controller' tab in the 'Properties' panel. The 'State' tab is selected, indicated by a red circle icon. The 'Data' section shows a list of ports and their status.

Controller	
General	
State	
Data	
Controller	OK
Port A	Short circuit
Port B	OK
Port C	OK
Port D	OK

Wiring Check in Ballast Test

Click to Ballasts in Device Tree, Start Device Test.

Shortcut with between DALI lines will be detected (correct polarity required)

The screenshot shows a dialog box with an 'OK' button and a red text message: 'DALI port A connected with DALI port B'.

OK **DALI port A connected with DALI port B**

APPENDIX

DALI PROFESSIONAL System and Configuration Software

Wires

We recommend to carry the 2-pole DALI line with the usual electrical installation e.g. NYM 5-wire. The DALI bus is no safety low voltage and has to be handled like mains voltage.

Mains Interruption

After mains voltage interruption the last project light status will be re-established

Mains Voltage Sensitivity of the DALI Connections

During switch-on the Controller is protected against mains voltage on DALI terminals, but there is no protection during operation. The couplers are not protected against wrong wiring with mains voltage and can be destroyed.

DALI Supply

OSRAM DALI PRO CONT-4 supplies max. 200 mA to each DALI line

DALI Linefailure

In case of a shortcut in a DALI line the according LED of the Controller will show this by flashing.
The remaining DALI lines still have full functionality in a finished project. But during device search DALI shortcuts can cause problems in the whole process -> solve wiring failures first before commissioning.

System Reset

To bring the controller into the delivery status (plug & play functionality) an empty configuration has to be uploaded. After this the connected devices can be reset to delivery status by longpress on button ON/OFF/DIM until PowerLED flashes. With this the function of the system is the same as in a new installation without configuration, means all connected pushbuttons / PIR sensors act parallel to create default action in the according DALI line.

Setup with Plug&Play

see Controller manual

Select Language

Click 'Configuration' in left tree, select language in properties on the right side of the screen or click on according flag in Menue Line. Then close software and, open it again

Addressing

ECG are addressed and operated according DALI Standard IEC 62386-101, -102
Coupler are used acc. status of IEC 62386 (2010 OSRAM / Siemens proposal)

Groups, Functions

are created visually in Graph view

Scenes

Creation of scenes and visualisation in Picture view

Eventcontrol - Stairway Function, Corridor Function

Use PIR Sensor with function Movement and configure Actions

Sequences see Eventcontrol

Time dependent control see Eventcontrol

Central OFF

Create additional room and group containing all ECGs and connect according pushbutton

Energysaving by Daylight Harvesting

see Light Regulation page 10

ECG Exchange

replace a defect ECG by merging with existing configuration (Merge function)

Lampdefect

If ERROR-LED is flashing at the Controller there is a lampfailure (missing or defect lamp).
Related DALI Port and ECG name is reported in message line. Lampfailure message can be disabled by 'Check lampfailure' = 'no' in Configuration / Properties / General.
Lampfailure message can be reported to BMS, details see chapter 'Report Lamp Failure to Relay'

Remote Connection of PC to Controller - USB to LAN / WLAN

successfully tested with BELKIN Hub F5L009 (USB to LAN) and D-Link DAP 1160 (LAN to WLAN)

Supported Windows Versions

Successfully tested with Windows XP, Windows Vista, Win7, Win8.

Use of Competitor Products

Non-OSRAM devices e.g. ECGs can be used if DALI-Standards are fulfilled. But for these devices we cannot ensure the full functionality. For DALI couplers the standartisation is ongoing and not finished (IEC 62386-103,-104 Input Devices), therefore only OSRAM and Siemens products are well defined in this system.

ECG Parameter Setting

Standard DALI ECG parameters e.g. System Failure Level can be set directly within the software

	Ballast A 05	Min level	20
	Ballast A 06	Max level	100
	Ballast A 11	System failure level	100
	Ballast A 12	Power on level	50


Also a common change can be created for all ECG on 'Units' level in device tree.

Use of already addressed ECGs

If during setup there are found used ECGs which carry e.g. already a DALI short address so this will be unchanged. Should there be 2 identical addresses the conflict will be solved by automatical address shift.

Wire Length Pushbutton to Pushbutton Coupler

The maximum wire length of Pushbutton to Pushbutton Coupler is 2 meter. Direct extension is not possible because the power of the coupler and sensor is supplied from DALI line and with this there is a lower EMI tolerance. But the coupler input can be used with a relais dry contact output and the relais is controlled with a mains voltage signal from longer distance.

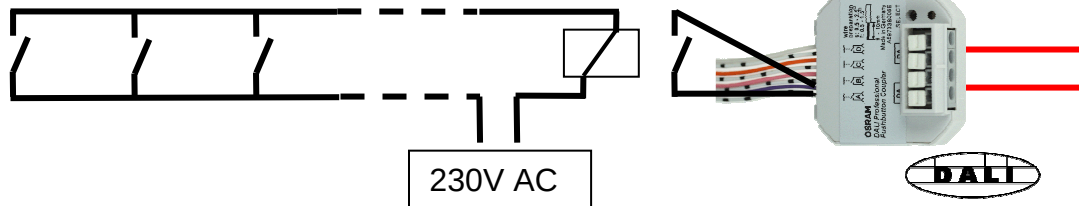

Pushbutton Coupler Connector - Graphic Representation in Tree for Pushbuttons

During a perfect setup a selfexplaining name shall be given e.g. ' Room2_PushbuttonRight'.

The automatic predefined names show :

Coupler type + DALI Linie + Unique serial number of the coupler + Input name (see label) + Color of connected cable.

	Couplers (4)
	PB A 0-0-6-150 A violet
	PB A 0-0-6-150 B pink
	PB A 0-0-6-150 C orange
	PB A 0-0-6-150 D white

Only One Sensor per Sensorcoupler

In case of MULTI3 controller up to 4 sensors can be connected because the device is directly conneted to mains voltage. In the DALI Professional system the power of the coupler and sensor is supplied from DALI line. To maximize the total number of possible sensors per DALI line and to avoid additional circuit complication only one Sensor per Sensorcoupler is allowed. But 10 Sensors/Sensorcoupler can be used together in one regulation (level averaging).

Wire Length Sensor

The maximum wire length of LS/PD Sensor to Sensorcoupler is 5 meter. An extension up to 50 m like with MULTI3 is not possible because the power of the coupler and sensor is supplied from DALI line and with this there is a lower EMI tolerance.

Lightsensor Installation

The OSRAM LS/PD MULTI lightsensor is optimized for 2..4 m distance to the measurement area. With OSRAM DALI HIGHBAY ADAPTER up to 13 m can be achieved.

Sensorcoupler Setup

The configuration software recognizes the requested PIR by movement in the related area.

-> 2 blinking dots (together with combined lightsensor)

for advanced users : naming of PIR / LS also possible after setup with Testfunction

PIR Sensor Application Specialities in Application Type Office (default)

If in a room with PIR sensor the light is already on, the PIR event will not change the current light situation.

Reason : No override for manual changes by movement / occupancy detection.

Furthermore the PIR sensor action is blocked for 30s after manual off to give the chance to leave the room.

Application type setting Industry is different - see chapter 'Application Type Setting'

Use of MULTeeco functionality in DALI Professional System

PIR can be inactivated by not using an action in 'Movement'

PIR only for shut-off can be achieved by setting 'time to action' e.g. 300 s und Action = OFF.

With this the timer starts with each movement and after 5 minutes without presence the light will switch off.

In both cases a pushbutton should be configured with 'Shortpress' for manual operation.

Energysaver Function by Mains Switching with Controller Integrated Relay


To to be solved by later updates.

New : OSRAM DALI EVG standby power losses reduced to 200 mW (1 and 2-lamp)

Corridorfunction

with OSRAM DALI Sensorcoupler - independent configuration with flexible steps, delays, ramps

with other devices e.g. OSRAM HIGHBAY Sensor use floating contact / input of DALI HIGHBAY Adapter

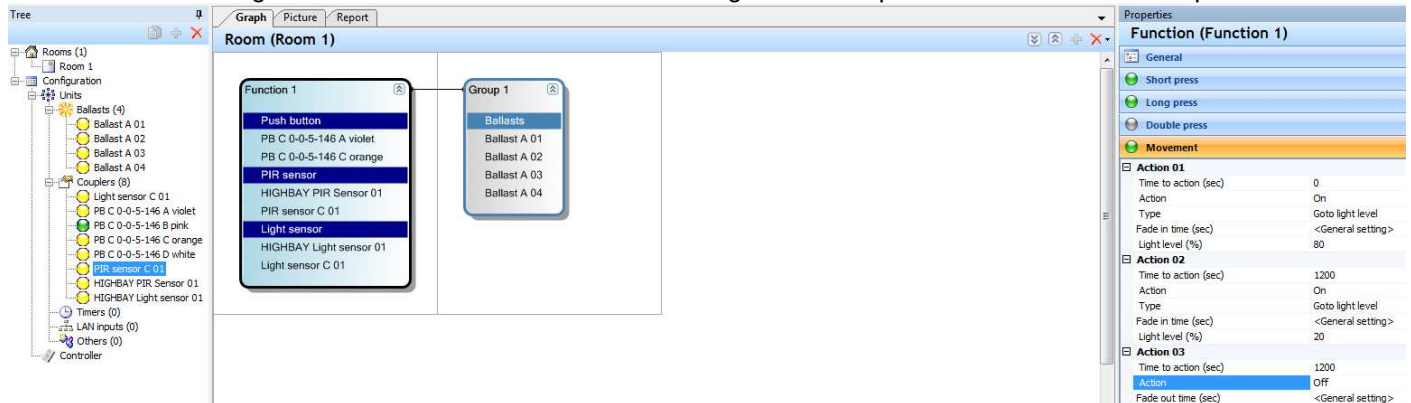

Project Documentation

as whole project data in DALIpro dataformat - xxxxx.osrdpc

as project document incl. all devices and functions - print HTML document from Configuration Report

Create Diagnostic File

To enable a better analysis of problems a diagnostic file can be created und sent via email.

How to use : click  in menu line, click 'Diagnose' -> create file in predefined folder

DALI Logo

The official DALI Logo  is not allowed on the product because the standardisation of Input Devices IEC 62386 (Input Devices) is not finally signed by the committee.

Conformity with the requirements to control DALI ECG IEC 62386-101, 102 is already given.

Emergency Lighting

not implemented

Firmwareupgrade Controller

Together with each upgrade of the software (e.g. via OSRAM internetpage www.osram.com/software)

there is transported automatically the latest firmware of the controller. Installation via USB cable to controller (no mains supply required for this upgrade)

Procedure : open OSRAM DALI Pro Software, click  in menu line

-> submenu 'update firmware' -> search, select -> Update

-> details see chapter 'Firmwareupgrade Controller'

DALI Professional System features with DALIpro Software 1.5.0

Limits, maximum values per DALI PROFESSIONAL Controller CONT-4 (RTC)

- 4x maximum 64 ECG addresses
- 4x maximum 64 input device addresses (sensors / pushbuttons)
- Current limitation 200mA per DALI port
-> total limit of number of ECG + input devices depending on mix
- 4x max. 300m DALI line length, wires $\geq 1.5\text{mm}^2$
- max. 5m Sensor to Sensorcoupler
- max. 5m Lightsensor distance to measurement area (depending on reflection characteristic)
- max. 2m Pushbutton to Pushbutton Coupler
- 4x switch-over relais maximum 5A ohmic load each

System Features

- out-of-the-box plug & play functionality if no configuration loaded
- 4x 16+ Groups, line overlapping allowed
'+' means additional 'virtual' groups possible by software, but uses addressed commands
Final max. number of groups only limited by controller memory
- 4x 16 scenes, line overlapping allowed, but then one scene used for each line
- 4x 8 active light regulation loops
more possible when noticeable delay accepted, limited by reaction times
- full- and semi-automatic energy saver function with occupancy- and light-sensor
- up to 10 lightsensors / sensorcouplers per regulation
- corridor function with unlimited steps
- PIR disable / enable function
- sequences consisting of scenes, fade control, loops
- scene stepping
- visible resource status message
- switch function e.g. for Highbay Sensor integration
- serial / parallel configuration of grouped switches
- programmable internal relay to be used in action list
- testfunction for all DALI devices
- configuration check against physical available devices
- simple 'failed ECG' replacement
- retrieve configuration by download from controller
- full project documentation in HTML file
- up to 50 timers can be configured (RTC version only)

Perfect for

- industry hall
- warehouse
- classrooms
- single office
- large office
- meeting room
- corridor

Version:

December 2013

Please note:

All information in this manual has been prepared with great care. OSRAM, however, does not accept liability for possible errors, changes and/or omissions. Please check www.osram.com or contact your sales partner for an updated copy of this manual.

Software updates:

To ensure the latest software version is used please consult the OSRAM website www.osram.com in regular intervals (once a month). New versions will be released due to software improvements, additional supported devices and bug fixing.