


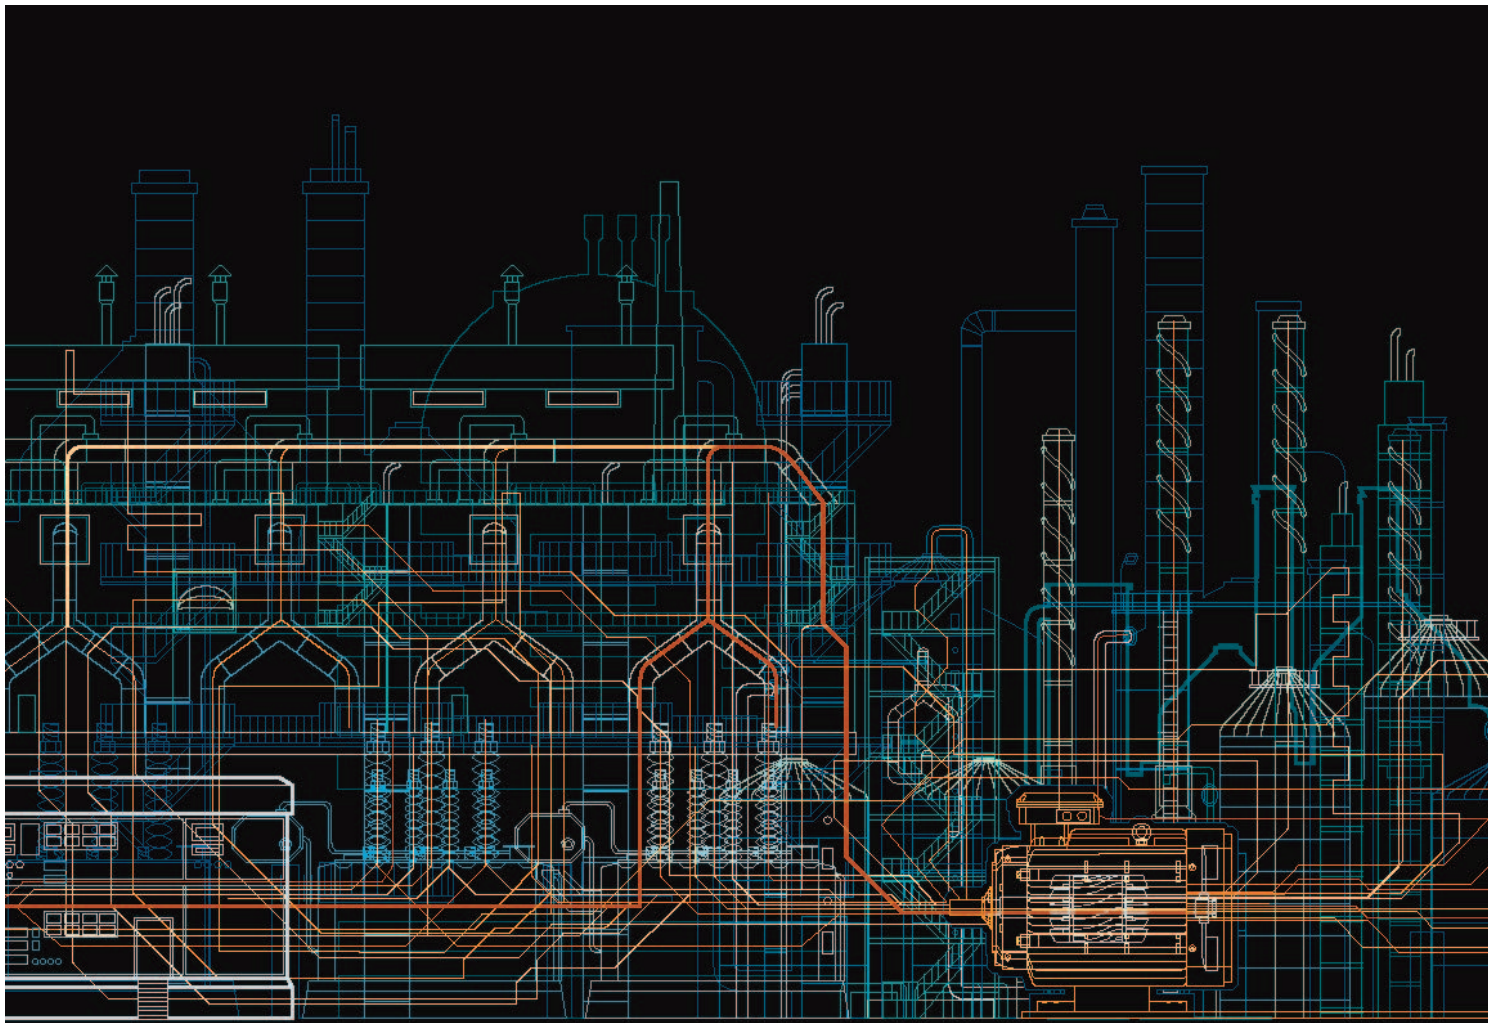

Application Note

Protection for Resistance Temperature Detectors (RTDs)

furse 

Power and productivity
for a better world™ 

Protection for Resistance Temperature Detectors (RTDs)

The Resistance Temperature Detector is a widely used device for measuring temperature. In basic terms, the electrical resistance of a sensing resistor, R_t , varies with temperature.

Temperature is simply measured indirectly by reading the voltage drop across the sensing resistor in the presence of a constant current flowing through it using Ohm's Law.


Fundamentally, every sensing resistor is a 2 wire device. It is essential that the resistance values of any external lead wires are taken into account.

Depending on the accuracy required and application, the sensing resistor is terminated with either 2, 3 or 4 wires. Each type of lead wire arrangement is connected to a suitable bridge circuit in the measuring instrumentation.

2 Wire systems

2 Wire systems offer poor accuracy due to lead resistance but are adequate for some industrial applications.


This type of system can be protected using a single 2-channel ESP 06D or space saving Slim Line ESP SL06 lightning barrier (ESP 06D illustrated opposite).

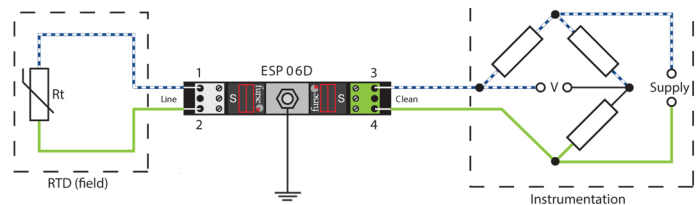

3 Wire systems - earthed bridge

3 Wire systems allow for a good deal of lead resistance compensation and therefore offer better accuracy than a 2 wire system.

In a typical 3 wire system, the bridge circuit is earthed as shown in the diagram opposite. It is therefore necessary to protect all three wires.

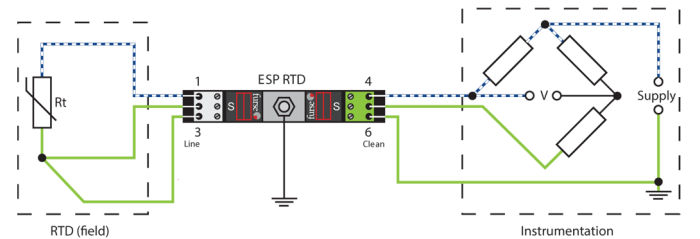


This could be accomplished using 2 ESP 06D or ESP SL06 barriers where only 1 channel of the second barrier is utilised. However, this would be bulky and not cost effective due to the unused channel.

The ESP SL RTD and ESP RTD are 3-channel barriers specifically designed to protect this type of system. All 3 channels are housed in an enclosure identical in size to their respective 06 type barrier

3 Wire systems - floating bridge

There are also 3 wire systems where the bridge circuit is not earthed and is said to be "floating".

In this system, a single ESP SL06 or ESP 06D barrier can be used to protect the 2 leads from the bridge arms whilst the third (supply) lead is connected to the barrier earth via the screen connection (ESP 06D shown below).

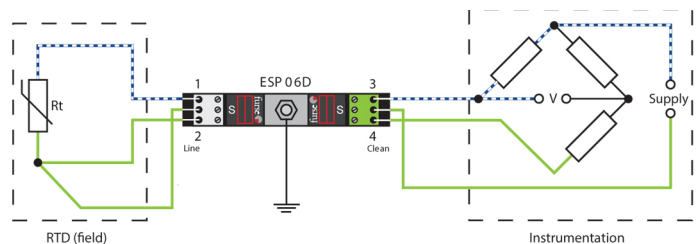


4 Wire systems

4 Wire systems provide the highest accuracy as the lead resistances and connection contact resistances have a negligible effect if the measuring circuit has high input impedance.

The leads are often connected to a constant current circuit.

All 4 channels can be protected using two ESP 06D or ESP SL06 barriers (ESP SL06 shown below).

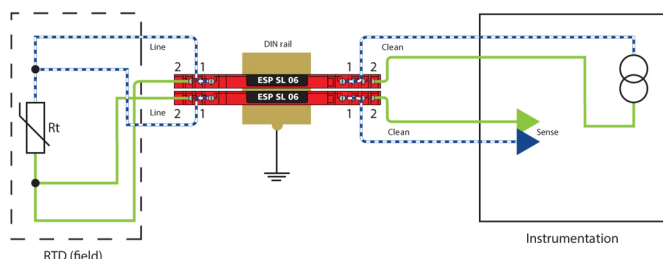

Summary

For 2 wire systems

use 1 x ESP 06D or ESP SL06 Lightning Barrier

For 3 wire systems (earthed bridge)

use 1 x ESP RTD or ESP SL RTD Lightning Barrier

For 3 wire systems (floating bridge)

use 1 x ESP 06D or ESP SL06 Lightning Barrier

For 4 wire systems

use 2 x ESP 06D or ESP SL06 Lightning Barrier

Please note:


Information about safe and correct installation of Furse Lightning Barriers can be found in the *ESP Lightning Barrier Installation Instructions*, supplied with all products.

Protecting multiple RTDs

Where there are multiple RTD systems requiring protection, the ESP Q series variants, ESP 06Q and ESP RTDQ, can be utilised.



The ESP 06Q provides protection for 4 pairs (8 channels) of wires whilst the ESP RTDQ will protect three sets of 3 wires (9 channels). Diagrams for each type are shown opposite.

Thus space saving potential and cost effectiveness can be realised over the equivalent number of individual barriers.

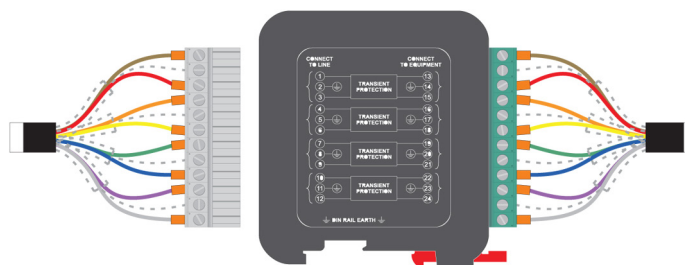

An ESP 06Q unit is capable of protecting:

- Four 2 wire systems
- Four 3 wire systems (floating bridge)
- Two 4 wire systems

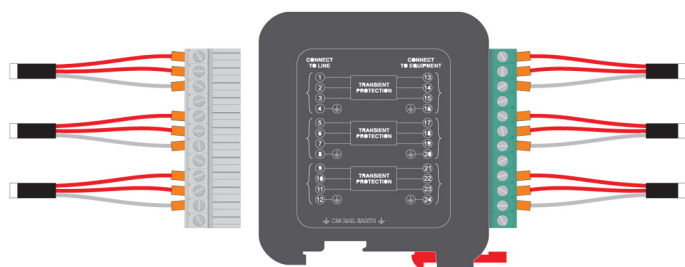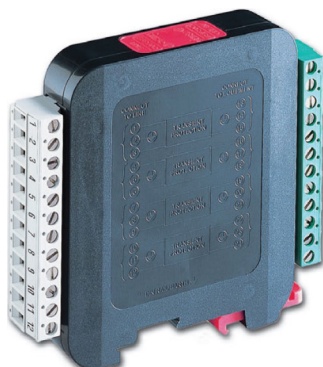

An ESP RTDQ unit is designed to protect up to three 3 wire systems with an earthed bridge.

Contact us

ABB Furse

UK Office

Wilford Road
Nottingham
NG2 1EB

Tel: +44 (0) 115 964 3700
Fax: +44 (0) 115 986 0071
Sales Tel: +44 (0) 333 999 9900
Sales Fax: +44 (0) 333 999 9901
E-Mail: enquiry@furse.com

Note: We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG.

Copyright © 2015 ABB
All rights reserved

© Copyright ABB 2015 AN001

Thomas & Betts Ltd. Br.

A Member of the ABB Group

Middle East Sales Office

Office 724 6WA West Wing
Dubai Airport Free Zone
PO Box 54567
Dubai

United Arab Emirates
Tel: +971 (0)4 609 1635
Fax: +971 (0)4 609 1636
E-mail: furseenquiry@tnb.com

Thomas & Betts (Saudi Arabia)

KSA Office

Building 128

Dammam Industrial Area #2

PO Box 514

Al Khobar 31952

Saudi Arabia

Tel: +966 13 812 1222

Fax: +966 13 812 1175

E-mail: furseenquiry@tnb.com

Thomas & Betts Asia (Singapore) Pte Ltd.

A Member of the ABB Group

c/o ABB Pte Ltd

2 Ayer Rajah Crescent

Level 4

Singapore 139935

Tel: +65 6776 5711

Fax: +65 6778 0222

E-mail: asia.inquiry@tnb.com

www.furse.com

Power and productivity
for a better world™

